

April 2012

No. OCH500

REVISED EDITION-A

# TECHNICAL & SERVICE MANUAL

## CITY MULTI Series Ceiling Suspended R410A / R22

Indoor unit  
[Model names]

[Service Ref.]

PCFY-P15NKMU-E	<b>PCFY-P15NKMU-E.TH</b> <b>PCFY-P15NKMU-ER1.TH</b>
PCFY-P24NKMU-E	<b>PCFY-P24NKMU-E.TH</b> <b>PCFY-P24NKMU-ER1.TH</b>
PCFY-P30NKMU-E	<b>PCFY-P30NKMU-E.TH</b> <b>PCFY-P30NKMU-ER1.TH</b>
PCFY-P36NKMU-E	<b>PCFY-P36NKMU-E.TH</b> <b>PCFY-P36NKMU-ER1.TH</b>


**Revision:**

- PCFY-P15/24/30/36NKMU-ER1 have been added in REVISED EDITION-A.
- Some descriptions have been modified.

- Please void OCH500.

**Note:**

- This manual describes only service data of the indoor units.
- RoHS compliant products have <G> mark on the spec name plate.

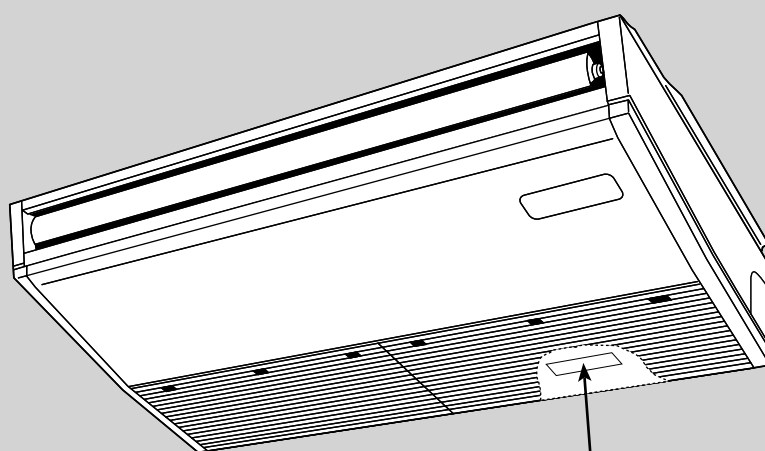

INDOOR UNIT

Model name  
indication

## CONTENTS

1. TECHNICAL CHANGES.....	2
2. PART NAMES AND FUNCTIONS .....	2
3. SPECIFICATION .....	4
4. OUTLINES AND DIMENSIONS.....	8
5. WIRING DIAGRAM .....	11
6. REFRIGERANT SYSTEM DIAGRAM.....	13
7. MICROPROCESSOR CONTROL.....	14
8. TROUBLESHOOTING .....	21
9. DISASSEMBLY PROCEDURE .....	30

## PARTS CATALOG (OCB500)



## Use the specified refrigerant only

### Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

## 1

## TECHNICAL CHANGES


PCFY-P15NKMU-E	➔	PCFY-P15NKMU-ER1
PCFY-P24NKMU-E	➔	PCFY-P24NKMU-ER1
PCFY-P30NKMU-E	➔	PCFY-P30NKMU-ER1
PCFY-P36NKMU-E	➔	PCFY-P36NKMU-ER1

INDOOR CONTROLLER BOARD (I.B.) has been changed (S/W version up).

## 2

## PART NAMES AND FUNCTIONS

### • Indoor unit

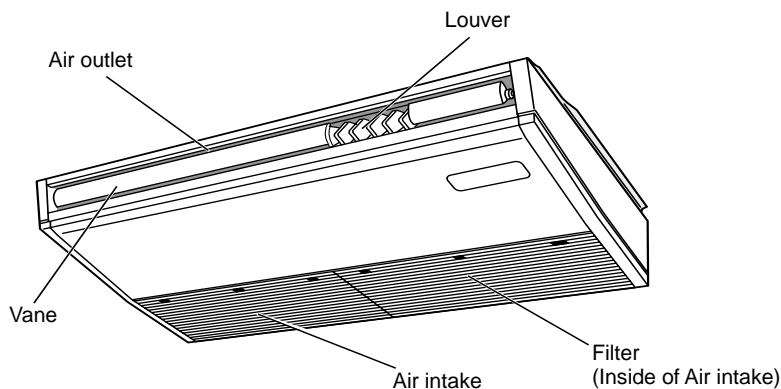




## • Wired remote controller

### Note:

The phrase "Wired remote controller" in this manual refers only to the PAR-21MAA.

If you need any information for the other remote controller, please refer to either the installation manual or initial setting manual which are included in remote controller's box.

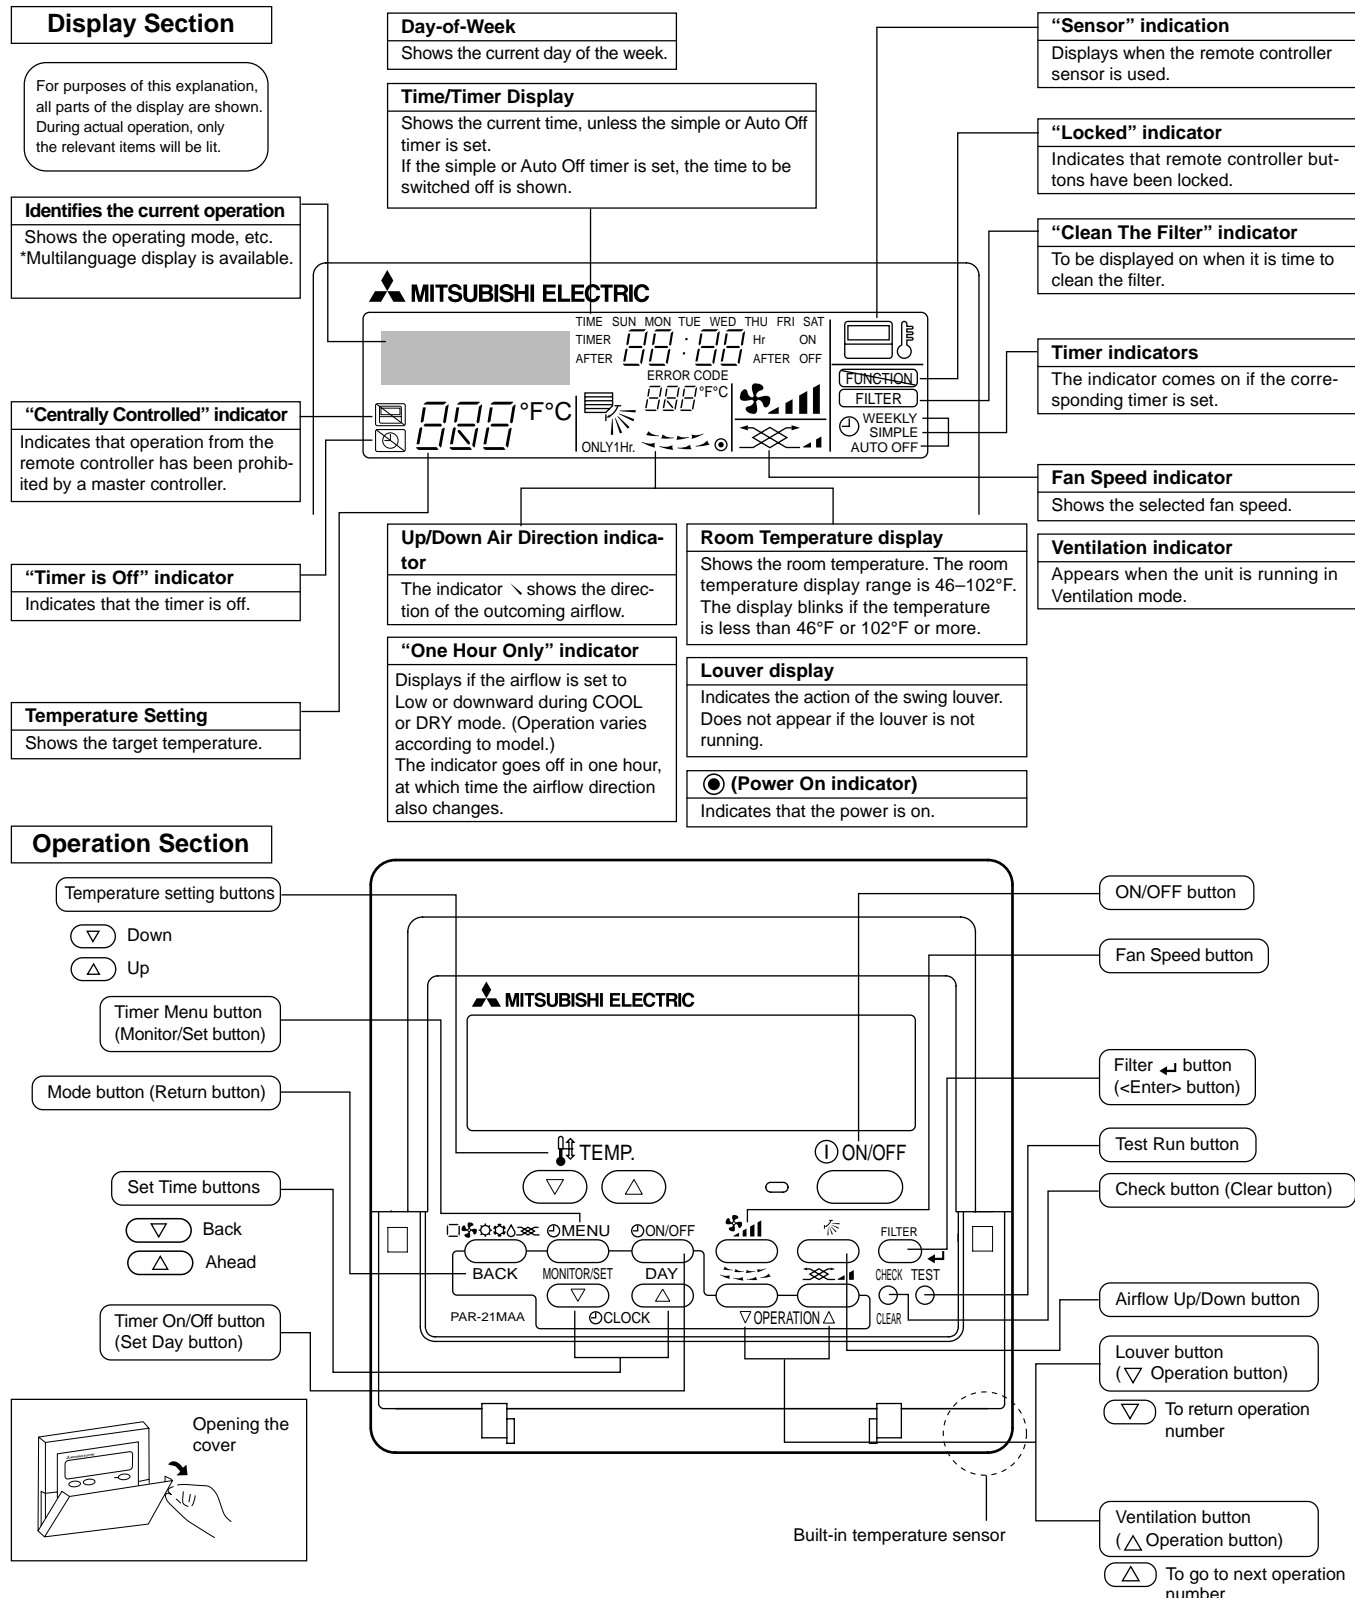



## 3-1. SPECIFICATIONS

Service ref.			PCFY-P15NKMU-E.TH PCFY-P15NKMU-ER1.TH	PCFY-P24NKMU-E.TH PCFY-P24NKMU-ER1.TH	PCFY-P30NKMU-E.TH PCFY-P30NKMU-ER1.TH	PCFY-P36NKMU-E.TH PCFY-P36NKMU-ER1.TH
Power source			1-phase 208/230V 60Hz			
Cooling capacity (Nominal)	*1	kW	4.4	7.0	8.8	10.6
	*1	Btu/h	15,000	24,000	30,000	36,000
	Power input	kW	0.03	0.04	0.09	0.11
	Current input	A	0.35	0.41	0.83	0.97
Heating capacity (Nominal )	*2	kW	5.0	7.9	10.0	11.7
	*2	Btu/h	17,000	27,000	34,000	40,000
	Power input	kW	0.03	0.04	0.09	0.11
	Current input	A	0.35	0.41	0.83	0.97
External finish			MUNSELL (6.4Y 8.9/0.4)			
External dimensions H x W x D		mm	230×960×680	230×1280×680	230×1600×680	
		in.	9-1/16×37-13/16×26-3/4	9-1/16×50-3/8×26-3/4	9-1/16×63×26-3/4	
Net weight		kg (lb)	24 (53)	32 (71)	36 (79)	38 (84)
Heat exchanger			Cross fin (Aluminum fin and copper tube)			
FAN	Type x quantity		Sirocco fan × 2	Sirocco fan × 3	Sirocco fan × 4	
	External static press.	Pa	0			
		mmH <sub>2</sub> O	0			
	Motor type		DC motor			
	Motor output	kW	0.090	0.095	0.160	
	Driving mechanism		Direct-driven by motor			
	Airflow rate	m <sup>3</sup> /min	10-11-12-13	14-15-16-18	20-22-25-28	21-24-27-31
	(Low-Mid2-Mid1-High)	L/s	167-183-200-217	233-250-267-300	333-367-417-467	350-400-450-517
		cfm	353-388-424-459	494-530-565-636	703-777-883-989	742-847-953-1095
Noise level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	29-32-34-36	31-33-35-37	34-37-40-43	36-39-42-44
Insulation material			Polyethylene sheet			
Air filter			PP honeycomb			
Protection device			Fuse			
Refrigerant control device			LEV			
Connectable outdoor unit			R410A, R22 CITY MULTI			
Diameter of refrigerant pipe	Liquid (R410A) (R22)	mm(in.)	ø6.35 (ø1/4) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare
			ø6.35 (ø1/4) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare
	Gas (R410A) (R22)	mm(in.)	ø12.7 (ø1/2) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare
			ø12.7 (ø1/2) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	ø19.05(ø3/4) Flare*3
Field drain pipe size		mm(in.)	O.D. 26mm (1)			
Standard attachment	Document		Installation Manual, Instruction Book			
	Accessory		Drain joint socket			
Optional parts	Drain pump kit		PAC-SH83DM-E	PAC-SH84DM-E		
	High efficiency filter		PAC-SH88KF-E	PAC-SH89KF-E	PAC-SH90KF-E	
	External heater adapter		PAC-YU25HT			
	i-see Sensor		PAC-SH91MK-E			
	Wireless remote controller with i-see Sensor		PAR-SA92MW-E			
	Wireless remote controller kit		PAR-SL93B-E			
Remarks	Installation		Details on foundation work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.			
Note :			*1 Nominal cooling conditions			Unit converter
Indoor :			80°FDB/67°FWB (26.7°CDB/19.4°CWB)			kcal/h = kW × 860
Outdoor :			70°FDB(21°CDB)			Btu/h = kW × 3,412
Pipe length :			47°FDB/43°FWB (8.3°CDB/6.1°CWB)			cfm = m <sup>3</sup> /min × 35.31
Level difference :			25 ft. (7.6 m)			lb = kg/0.4536
			0 ft (0 m)			
* Due to continuing improvement, above specification may be subject to change without notice.						
*Above specification data is subject to rounding variation.						




### 3-2. ELECTRICAL PARTS SPECIFICATIONS

Service Ref. Parts name	Symbol	PCFY-P15NKMU-E.TH PCFY-P15NKMU-ER1.TH	PCFY-P24NKMU-E.TH PCFY-P24NKMU-ER1.TH	PCFY-P30NKMU-E.TH PCFY-P30NKMU-ER1.TH PCFY-P36NKMU-E.TH PCFY-P36NKMU-ER1.TH
Room temperature thermistor	TH21	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ		
Liquid pipe thermistor	TH22	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ		
Gas pipe thermistor	TH23	Resistance 30°F/15.8kΩ, 50°F/9.6kΩ, 70°F/6.0kΩ, 80°F/4.8kΩ, 90°F/3.9kΩ, 100°F/3.2kΩ		
Fuse (Indoor controller board)	FUSE	250V 6.3A		
Fan motor	MF	8-pole OUTPUT 90W	8-pole OUTPUT 95W	8-pole OUTPUT 160W
Vane motor	MV	MSBPC20 DC12V 300Ω/phase		
Drain-pump (Option)	DP	INPUT 10.8W 24ℓ/Hr		
Drain float switch	FS	Open / Short detection DC 5V		
Linear expansion valve	LEV	DC12V Stepping motor drive Port dimension ø3.2 (0~2000pulse) EFM-40YGME		DC12V Stepping motor drive Port dimension ø5.2 (0~2000pulse) EFM-80YGME
Power supply terminal block	TB2	(L1, L2, GR) Rated to 330V 30A*		
Transmission terminal block	TB5	(M1, M2, S) Rated to 250V 20A *		
MA remote controller terminal block	TB15	(1, 2) Rated to 250V 10A *		

\*Note : Refer to WIRING DIAGRAM for the supplied voltage.

### 3-3. SOUND LEVEL

PCFY-P•NKMU-E.TH

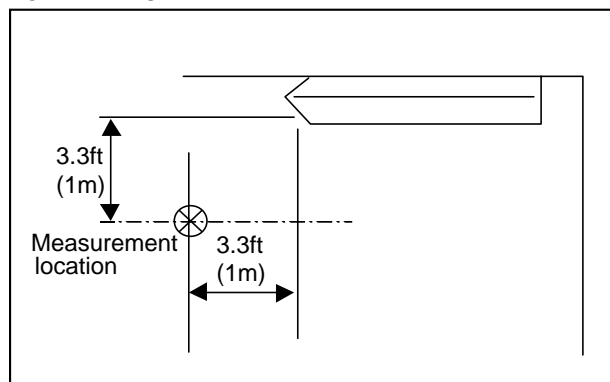

\* Measured in anechoic room.

Sound level at anechoic room : Low-Mid2-Mid1-High


Service Ref.	Sound level dB (A)
PCFY-P15NKMU-E.TH PCFY-P15NKMU-ER1.TH	29-32-34-36
PCFY-P24NKMU-E.TH PCFY-P24NKMU-ER1.TH	31-33-35-37
PCFY-P30NKMU-E.TH PCFY-P30NKMU-ER1.TH	34-37-40-43
PCFY-P36NKMU-E.TH PCFY-P36NKMU-ER1.TH	36-39-42-44



3-4. NC CURVES


PCFY-P15NKMU-E.TH  
PCFY-P15NKMU-ER1.TH

External static pressure : 0Pa  
Power source : 208V, 230V, 60Hz

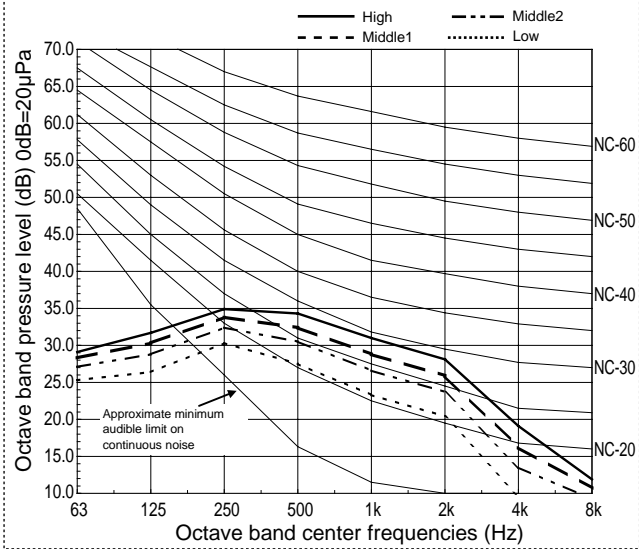


PCFY-P24NKMU-E.TH  
PCFY-P24NKMU-ER1.TH

External static pressure : 0Pa  
Power source : 208V, 230V, 60Hz

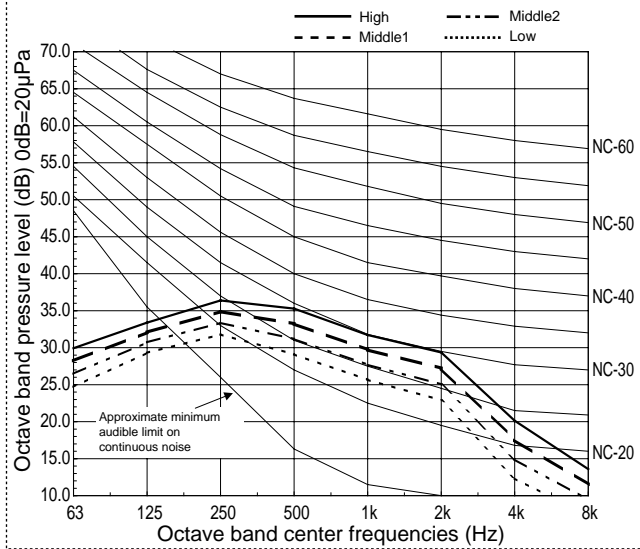


PCFY-P30NKMU-E.TH  
PCFY-P30NKMU-ER1.TH

External static pressure : 0Pa  
Power source : 208V, 230V, 60Hz

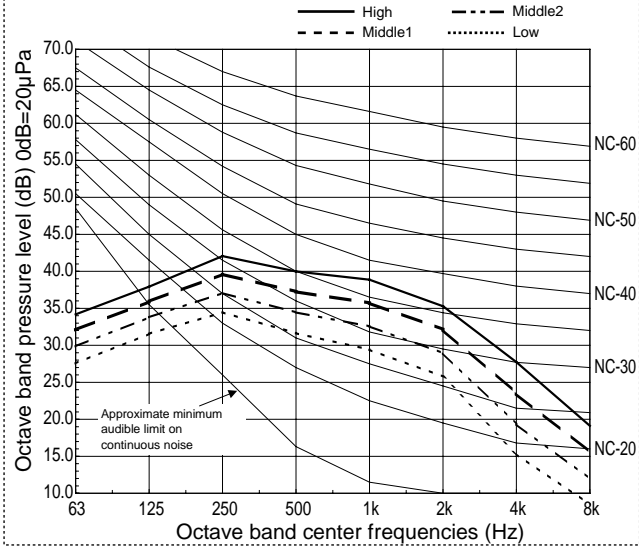

PCFY-P36NKMU-E.TH  
PCFY-P36NKMU-ER1.TH


External static pressure : 0Pa  
Power source : 208V, 230V, 60Hz

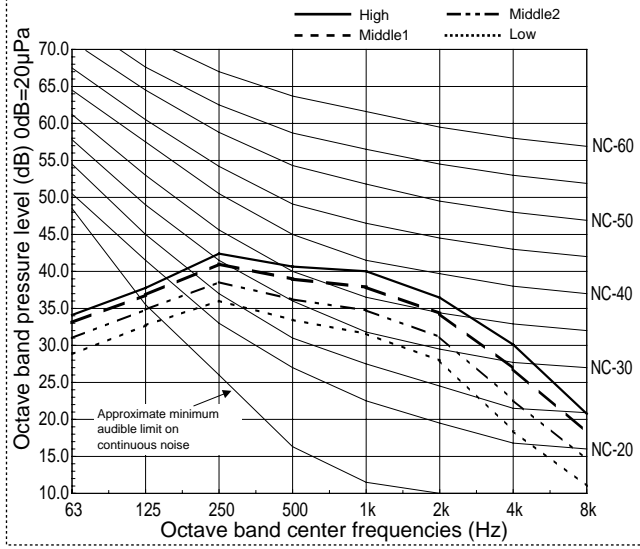




### 3-5. FRESH AIR INTAKE AMOUNT & STATIC PRESSURE CHARACTERISTICS

#### ■ PCFY-P15NKMU-E.TH PCFY-P15NKMU-ER1.TH

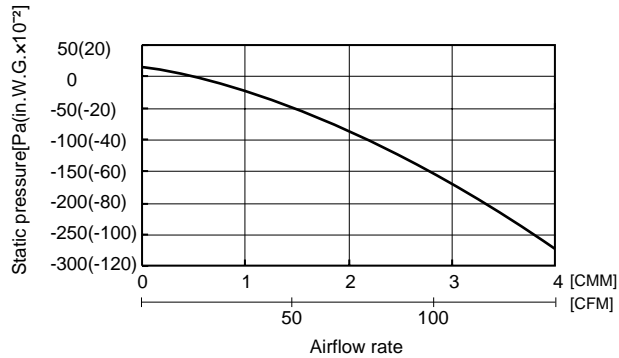


#### How to read curves

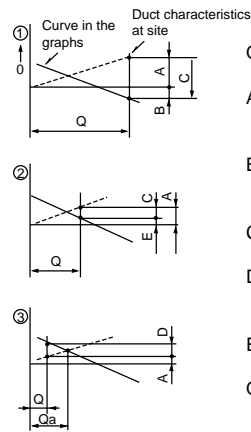


- Q...Designed amount of fresh air intake <CMM(CFM)>
- A...Static pressure loss of fresh air intake duct system with airflow amount Q <Pa(in.W.G. $\times 10^{-2}$ )>
- B...Forced static pressure at air conditioner inlet with airflow amount Q <Pa(in.W.G. $\times 10^{-2}$ )>
- C...Static pressure of booster fan with airflow amount Q <Pa(in.W.G. $\times 10^{-2}$ )>
- D...Static pressure loss increase amount of fresh air intake duct system for airflow amount Q <Pa(in.W.G. $\times 10^{-2}$ )>
- E...Static pressure of indoor unit with airflow amount Q <Pa(in.W.G. $\times 10^{-2}$ )>
- Qa...Estimated amount of fresh air intake without D <CMM(CFM)>

#### ■ PCFY-P24NKMU-E.TH PCFY-P24NKMU-ER1.TH

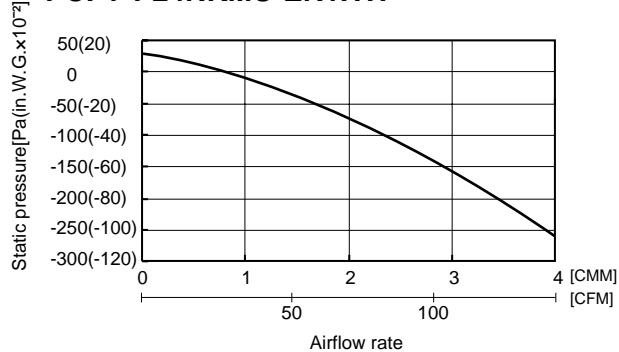

#### ■ PCFY-P30, 36NKMU-E.TH PCFY-P30, 36NKMU-ER1.TH



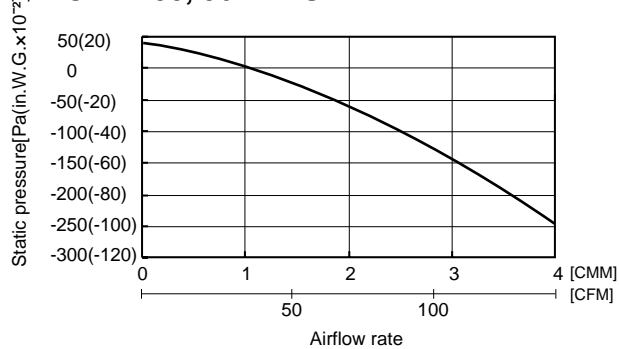




PCFY-P15NKMU-E.TH  
PCFY-P15NKMU-ER1.TH

Unit : inch(mm)

[FRONT VIEW]

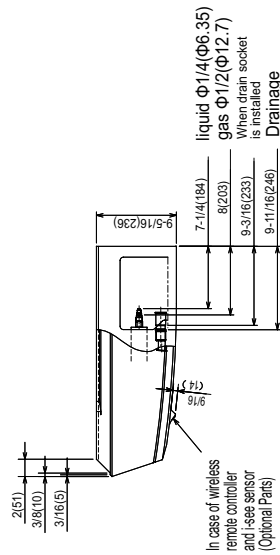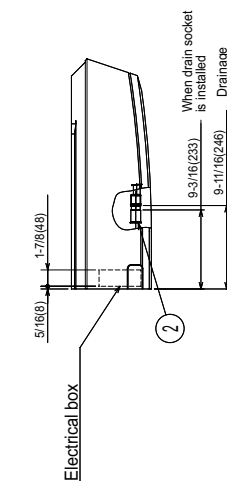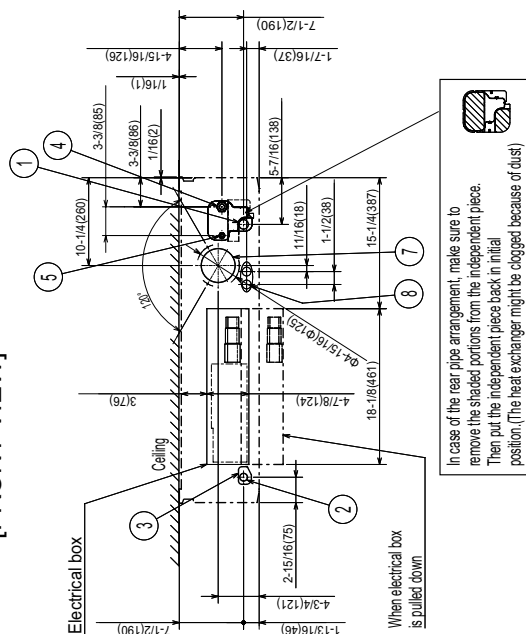

In case of wireless remote controller and i-see sensor (Optional Parts)

In case of wireless remote controller and i-see sensor (Optional Parts)

Emergency operation switch <Cooling>

Emergency operation switch <Heating>

Receiver

Operation lamp

NOTES.

1. Use M10 or W3/8 screw for anchor bolt.
2. Please be sure when installing the drain pump(option parts), refrigerant pipe will be only upward.


- 1 Drainage pipe connection (1(26mm) I.D.)
- 2 Drainage pipe connection (for the left arrangement)
- 3 Knockout hole for left drain-piping arrangement
- 4 Refrigerant-pipe connection (gas pipe side/flared connection)
- 5 Refrigerant-pipe connection (liquid pipe side/flared connection)
- 6 Knockout hole for upper drain pipe arrangement
- 7 Knockout hole for fresh air intake  $\Phi 3-15/16(\Phi 100)$
- 8 Knockout hole for wiring arrangement  $\Phi 7/8(\Phi 22)$

Accessory...Drain socket (1(26mm) I.D.)



PCFY-P24NKMU-E.TH  
PCFY-P24NKMU-ER1.TH

Unit : inch(mm)


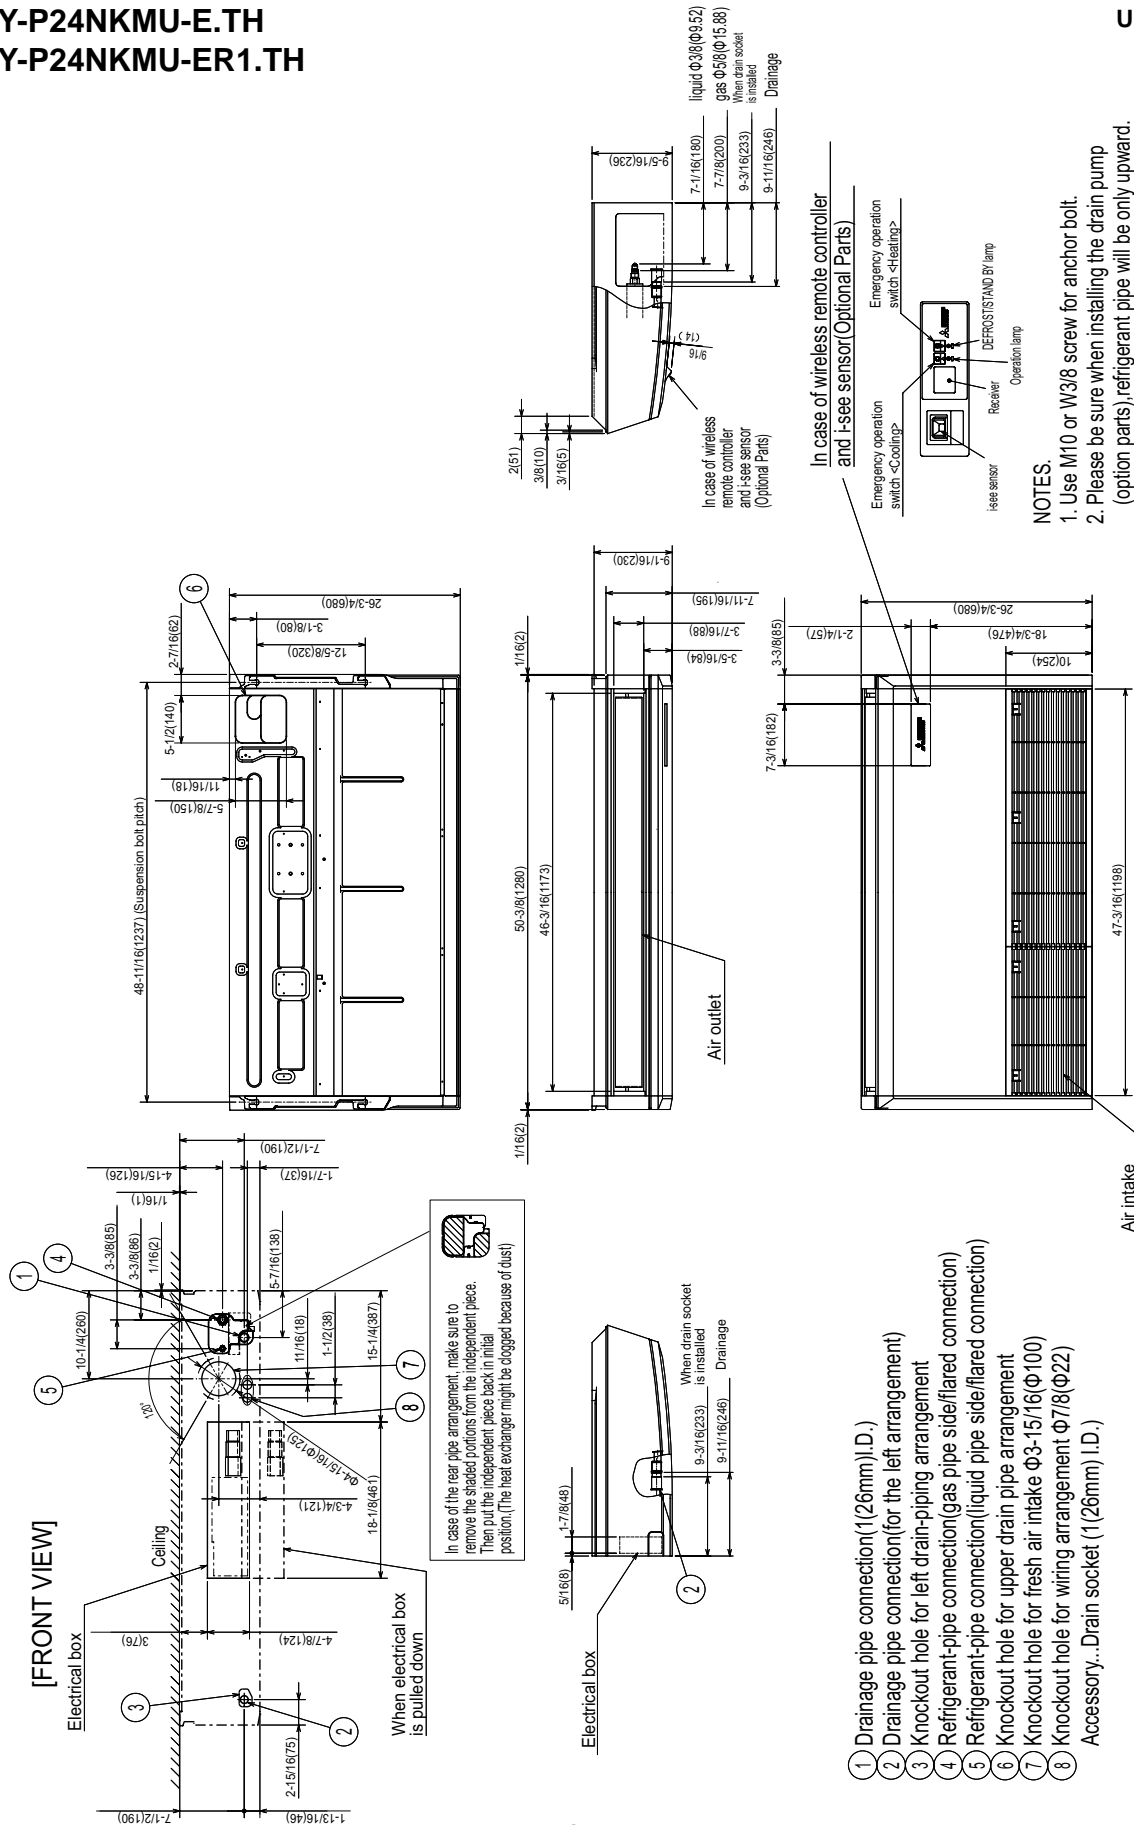




PCFY-P30NKMU-E.TH  
PCFY-P30NKMU-ER1.TH  
PCFY-P36NKMU-E.TH  
PCFY-P36NKMU-ER1.TH

Unit : inch(mm)

- NOTES.
1. Use M10 or W3/8 screw for anchor bolt.
  2. Please be sure when installing the drain pump (option parts), refrigerant pipe will be only upward.

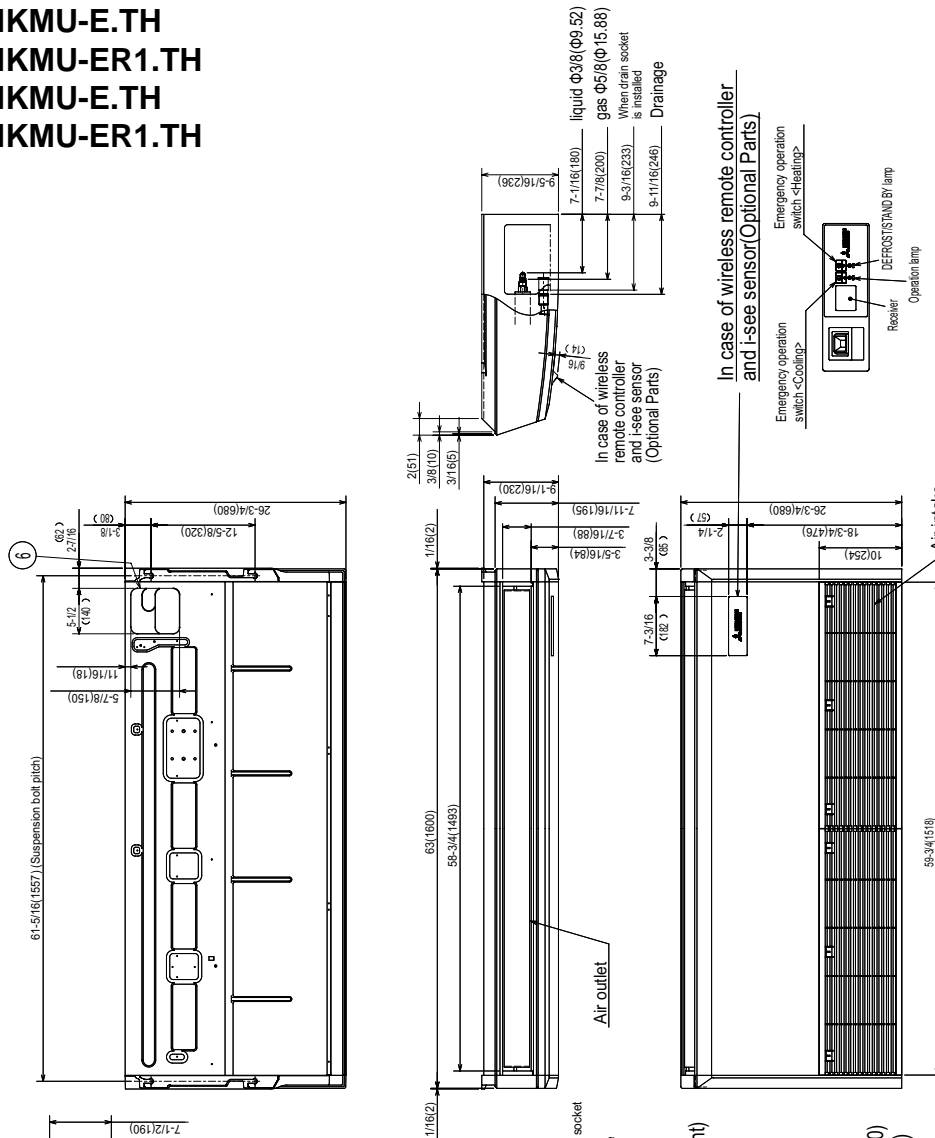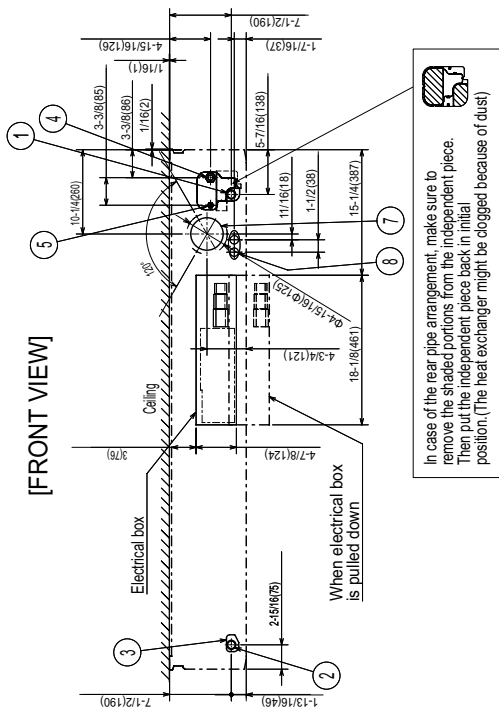

- 1 Drainage pipe connection (1(26mm) I.D.)
  - 2 Drainage pipe connection (for the left arrangement)
  - 3 Knockout hole for left drain-piping arrangement
  - 4 Refrigerant-pipe connection (gas pipe side/flared connection)
  - 5 Refrigerant-pipe connection (liquid pipe side/flared connection)
  - 6 Knockout hole for upper drain pipe arrangement
  - 7 Knockout hole for fresh air intake  $\Phi 3-15/16(\Phi 100)$
  - 8 Knockout hole for wiring arrangement  $\Phi 7/8(\Phi 22)$
- Accessory...Drain socket (1(26mm) I.D.)



# WIRING DIAGRAM

PCFY-P15NKMU-E.TH  
PCFY-P30NKMU-E.TH


PCFY-P24NKMU-E.TH  
PCFY-P36NKMU-E.TH

**【LEGEND】**



SYMBOL		NAME		SYMBOL		NAME	
I. B	INDOOR CONTROLLER BOARD			TH22	THERMISTOR	PIPE TEMP. DETECTION / LIQUID (32°F/15KΩ, 77°F/5.4KΩ Detect)	
	CN24	CONNECTOR	EXTERNAL HEATER	TH23		PIPE TEMP. DETECTION / GAS (32°F/15KΩ, 77°F/5.4KΩ Detect)	
	CN27		DAMPER				
	CN32		REMOTE SWITCH				
	CN51		CENTRALLY CONTROL				
	CN52		REMOTE INDICATION				
	FUSE	FUSE (T6.3AL250V)			A. B	ADDRESS BOARD	
	SW2	SWITCH	CAPACITY CODE *see table 1	SWA		CEILING HEIGHT SELECTOR	
	SW3		MODE SELECTION *see table 1	SWC		OPTION SELECTOR	
	SW4		MODEL SELECTION	SW1		MODE SELECTION	
SWE	DRAIN PUMP (TEST MODE)		SW11	ADDRESS SETTING 1s DIGIT			
X1	AUX. RELAY		DRAIN PUMP (OPTION PART)	SW12		ADDRESS SETTING 10ths DIGIT	
LEV	LINEAR EXPANSION VALVE			SW14	BRANCH No.		
MF	FAN MOTOR			OPTION PARTS			
MV	VANE MOTOR			W.B	PCB FOR WIRELESS REMOTE CONTROLLER		
TB2	TERMINAL BLOCK	POWER SUPPLY		BZ	BUZZER		
TB5		TRANSMISSION		LED1	LED (OPERATION INDICATION : GREEN)		
TB15	MA-REMOTE CONTROLLER			LED2	LED (PREPARATION FOR HEATING : ORANGE)		
TH21	THERMISTOR	ROOM TEMP. DETECTION (32°F/15KΩ, 77°F/5.4KΩ Detect)		RU	RECEIVING UNIT		
				SW1	EMERGENCY OPERATION (HEAT / DOWN)		
				SW2	EMERGENCY OPERATION (COOL / UP)		
				DP	DRAIN PUMP		
				FS	DRAIN FLOAT SWITCH		
				MT	I-SEE SENSOR MOTOR		

LED on indoor board for service

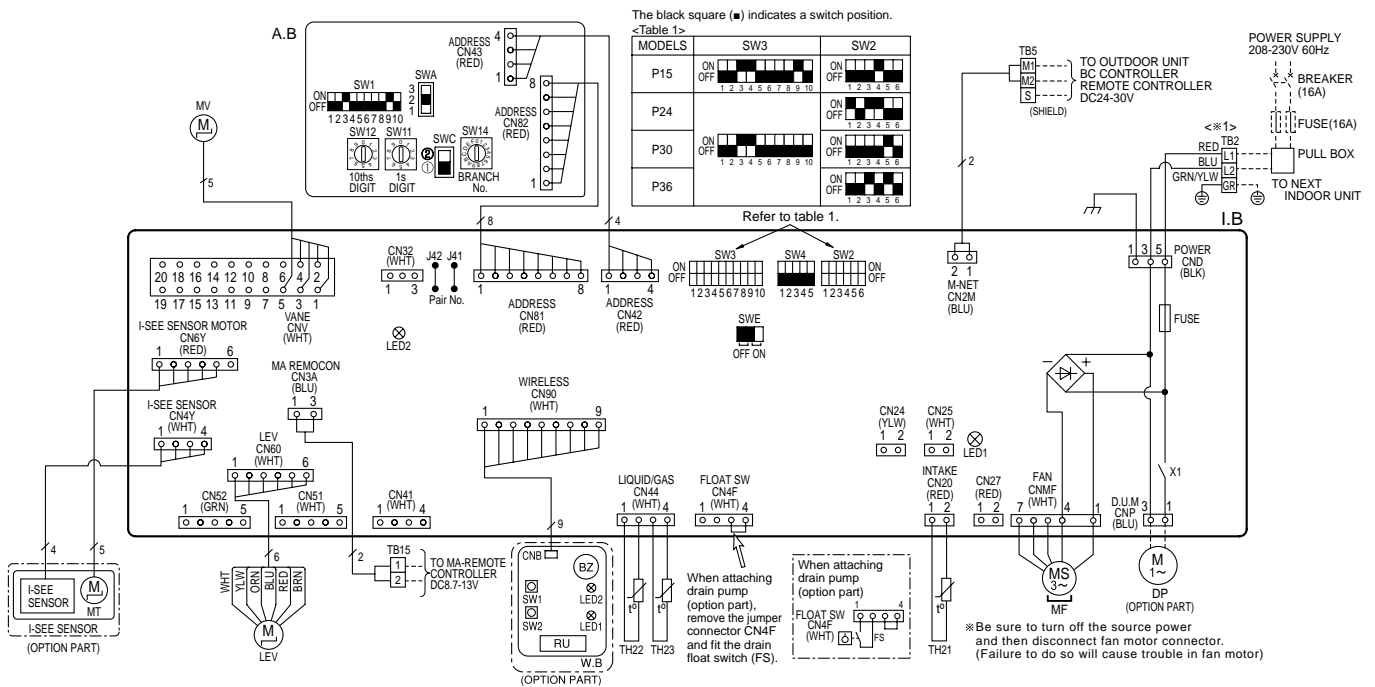Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit



NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
2. In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
4. Symbol [S] of TB5 is the shield wire connection.
5. Symbols used in wiring diagram above are, : terminal block, : connector.
6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to table 1.

<\*1>Use copper supply wires.



PCFY-P15NKMU-ER1.TH  
PCFY-P30NKMU-ER1.TH


PCFY-P24NKMU-ER1.TH  
PCFY-P36NKMU-ER1.TH

【LEGEND】

SYMBOL	NAME	SYMBOL	NAME
I. B	INDOOR CONTROLLER BOARD	TH22	THERMISTOR
CN24	CONNECTOR EXTERNAL HEATER	TH23	THERMISTOR
CN27	DAMPER		
CN32	REMOTE SWITCH		
CN51	CENTRALLY CONTROL	A. B	ADDRESS BOARD
CN52	REMOTE INDICATION	SWA	SWITCH
FUSE	FUSE (T6.3AL250V)	SWC	SWITCH
SW2	SWITCH CAPACITY CODE *see table 1	SW1	OPTION SELECTOR
SW3	MODE SELECTION *see table 1	SW11	MODE SELECTION
SW4	MODEL SELECTION	SW12	ADDRESS SETTING 1s DIGIT
SWE	DRAIN PUMP (TEST MODE)	SW14	ADDRESS SETTING 10ths DIGIT
X1	AUX. RELAY DRAIN PUMP (OPTION PART)		BRANCH No.
LEV	LINEAR EXPANSION VALVE	OPTION PARTS	
MF	FAN MOTOR	W.B	PCB FOR WIRELESS REMOTE CONTROLLER
MV	VANE MOTOR	BZ	BUZZER
TB2	TERMINAL BLOCK	LED1	LED (OPERATION INDICATION : GREEN)
TB5	TRANSMISSION	LED2	LED (PREPARATION FOR HEATING : ORANGE)
TB15	MA-REMOTE CONTROLLER	RU	RECEIVING UNIT
TH21	THERMISTOR ROOM TEMP. DETECTION (32°F/15kΩ, 77°F/5.4kΩ Detect)	SW1	EMERGENCY OPERATION (HEAT / DOWN)
		SW2	EMERGENCY OPERATION (COOL / UP)
		DP	DRAIN PUMP
		FS	DRAIN FLOAT SWITCH
		MT	I-SEE SENSOR MOTOR

LED on indoor board for service

Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit

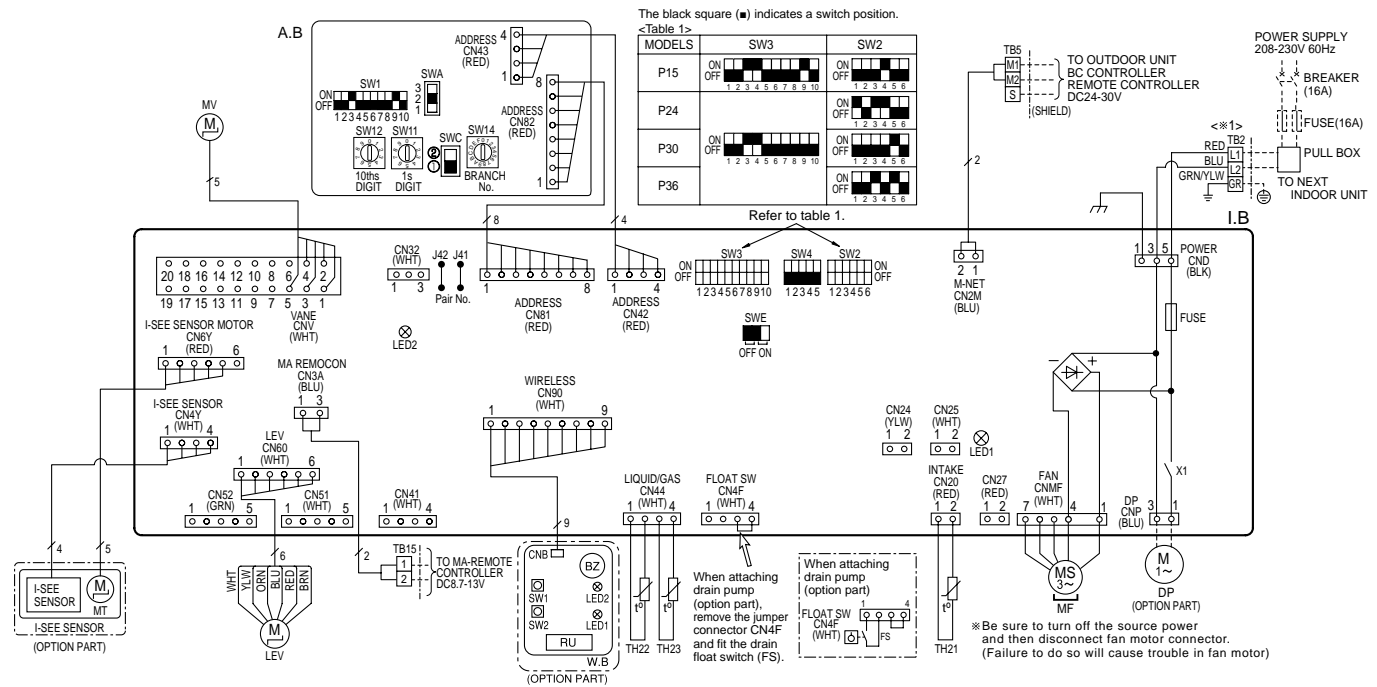

NOTES:


1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
2. In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
3. In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
4. Symbol [S] of TB5 is the shield wire connection.
5. Symbols used in wiring diagram above are, □□□□: terminal block, □□□□: connector.
6. The setting of the SW2 dip switches differs in the capacity. For the detail, refer to table 1.

<※1> Use copper supply wires.



PCFY-P15NKMU-E.TH  
 PCFY-P30NKMU-E.TH  
 PCFY-P15NKMU-ER1.TH  
 PCFY-P30NKMU-ER1.TH

PCFY-P24NKMU-E.TH  
 PCFY-P36NKMU-E.TH  
 PCFY-P24NKMU-ER1.TH  
 PCFY-P36NKMU-ER1.TH

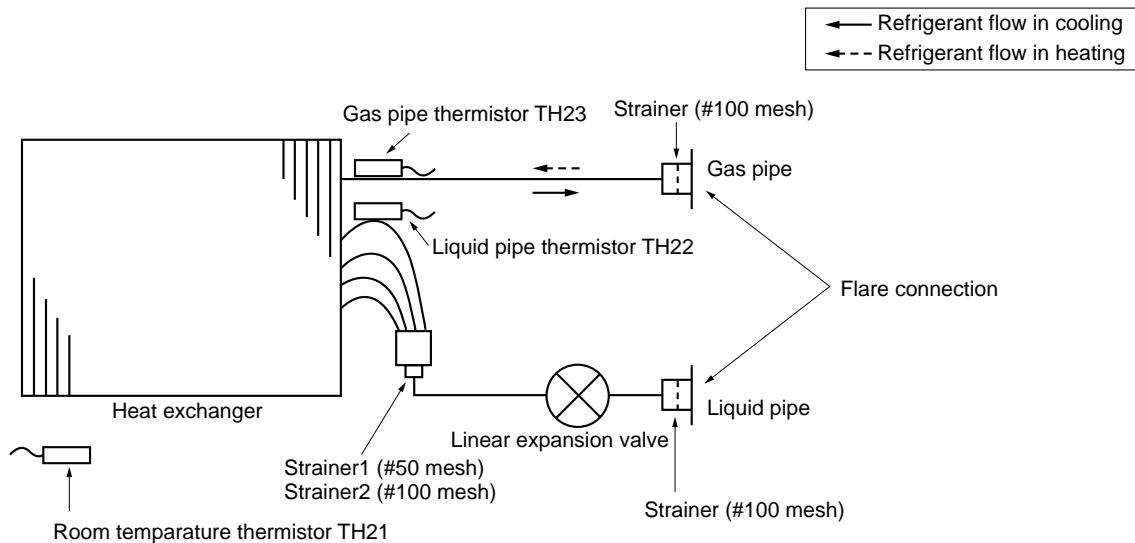


Unit : mm (inch)

Item	Service Ref.	PCFY-P15NKMU-E.TH PCFY-P15NKMU-ER1.TH	PCFY-P24NKMU-E.TH PCFY-P30NKMU-E.TH PCFY-P36NKMU-E.TH PCFY-P24NKMU-ER1.TH PCFY-P30NKMU-ER1.TH PCFY-P36NKMU-ER1.TH
Gas pipe		ø12.7 (1/2)	ø15.88 (5/8)
Liquid pipe		ø6.35 (1/4)	ø9.52 (3/8)



## INDOOR UNIT CONTROL

## 7-1. COOL OPERATION

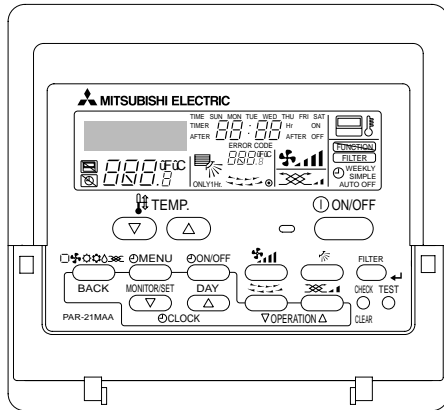

## &lt;How to operate&gt;

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display COOL.
- ③ Press the TEMP. button to set the desired temperature.

**NOTE:** The set temperature changes 2°F when the  $\nabla$  or  $\Delta$  button is pressed one time. Cooling 67 to 87°F


Control modes	Control details	Remarks				
1. Thermostat function	1-1. Thermostat function (Function to prevent restarting for 3 minutes) <ul style="list-style-type: none"><li>Room temperature <math>\geq</math> desired temperature + 2°F ...Thermo ON</li><li>Room temperature <math>\leq</math> desired temperature ...Thermo OFF</li></ul>					
	1-2. Anti-freezing control  Detected condition : When the liquid pipe temp. (TH22) is 32°F or less in 16 minutes from compressors start up, anti-freezing control starts and the thermo OFF.  Released condition : The timer which prevents reactivating is set for 3 minutes, and anti-freezing control is cancelled when any one of the following conditions is satisfied. <ul style="list-style-type: none"><li>① Liquid pipe temp. (TH22) turns 50°F or above.</li><li>② The condition of the thermo OFF has become complete by thermostat, etc.</li><li>③ The operation modes became mode other than COOL.</li><li>④ The operation stopped.</li></ul>					
2. Fan	By the remote controller setting (switch of 4 speeds+Auto) <table border="1"><thead><tr><th>Type</th><th>Fan speed notch</th></tr></thead><tbody><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></tbody></table> When [Auto] is set, fan speed is changed depending on the value of: Room temperature - Desired temperature	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					



Control modes	Control details	Remarks
3. Drain pump	<p>3-1. Drain pump control</p> <ul style="list-style-type: none"> <li>• Drain pump is always ON during the COOL and DRY mode operation. (Regardless of the thermo ON/OFF)</li> <li>• When the operation mode has changed from the COOL or DRY to the others (including Stop), the drain pump will be kept on for 3 minutes, then turns OFF.</li> </ul>	
	<p><b>Float switch control</b></p> <ul style="list-style-type: none"> <li>• Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF.</li> </ul> <p>In the water: Detected that the float switch is ON for 15 seconds.  In the air : Detected that the float switch is OFF for 15 seconds.</p> <p>Float SW ON OFF</p> <p>15sec. 15sec. 15sec. 1min.30sec. 1min.30sec.</p> <p>In the water In the air In the water Error postponement Drain pump abnormal</p>	
4. Vane (up/down vane change)	<p>(1) Initial setting: Start at COOL mode and horizontal vane.</p> <p>(2) Vane position:  Horizontal → Downward A → Downward B → Downward C → Downward D → Swing → Auto</p> <p>(3) Restriction of the downward vane setting  When setting the downward vane A, B, C or D in [Med1], [Med2], [Low] or [Auto] of the fan speed notch, the vane changes to horizontal position after 1 hour have passed.</p>	<p>• "ONLY 1 Hr" appears on the wired remote controller.</p>



## 7-2. DRY OPERATION

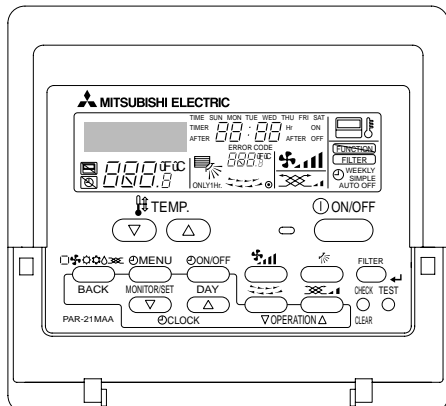

### <How to operate>


- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display DRY.
- ③ Press the TEMP. button to set the desired temperature.

**NOTE:** The set temperature changes 2°F when the  $\nabla$  or  $\Delta$  button is pressed one time. Dry 67 to 87°F

Control modes	Control details	Remarks																														
1. Thermostat function	1-1. Thermostat (Function to prevent restarting for 3 minutes) Setting the Dry thermo by the thermostat signal and the room temperature (TH21). Dry thermo ON Room temperature $\geq$ desired temperature + 2°F Dry thermo OFF Room temperature $\geq$ desired temperature <table><tr><th rowspan="2">Room temperature</th><th colspan="2">3 min. passed since starting operation</th><th rowspan="2">Dry thermo ON time (min)</th><th rowspan="2">Dry thermo OFF time (min)</th></tr><tr><th>Thermostat signal</th><th>Room temperature (T1)</th></tr><tr><td rowspan="5">Over 64°F</td><td rowspan="4">ON</td><td>T1 <math>\geq</math> 83°F</td><td>9</td><td>3</td></tr><tr><td>83°F &gt; T1 <math>\geq</math> 79°F</td><td>7</td><td>3</td></tr><tr><td>79°F &gt; T1 <math>\geq</math> 75°F</td><td>5</td><td>3</td></tr><tr><td>75°F &gt; T1</td><td>3</td><td>3</td></tr><tr><td>OFF</td><td>Unconditional</td><td>3</td><td>10</td></tr><tr><td>Less than 64°F</td><td colspan="3">Dry thermo OFF</td><td></td></tr></table>	Room temperature	3 min. passed since starting operation		Dry thermo ON time (min)	Dry thermo OFF time (min)	Thermostat signal	Room temperature (T1)	Over 64°F	ON	T1 $\geq$ 83°F	9	3	83°F > T1 $\geq$ 79°F	7	3	79°F > T1 $\geq$ 75°F	5	3	75°F > T1	3	3	OFF	Unconditional	3	10	Less than 64°F	Dry thermo OFF				
	Room temperature		3 min. passed since starting operation				Dry thermo ON time (min)	Dry thermo OFF time (min)																								
Thermostat signal		Room temperature (T1)																														
Over 64°F	ON	T1 $\geq$ 83°F	9	3																												
		83°F > T1 $\geq$ 79°F	7	3																												
		79°F > T1 $\geq$ 75°F	5	3																												
		75°F > T1	3	3																												
	OFF	Unconditional	3	10																												
Less than 64°F	Dry thermo OFF																															
	1-2. Freeze prevention control No control function																															
2. Fan	Indoor fan operation controlled depending on the compressor conditions. <table><tr><th>Dry thermo</th><th colspan="2">Fan speed notch</th></tr><tr><td>ON</td><td colspan="2">[Low]</td></tr><tr><td rowspan="2">OFF</td><td>Excluding the following</td><td>Stop</td></tr><tr><td>Room temp. &lt; 64°F</td><td>[Low]</td></tr></table> Note: Remote controller setting is not acceptable.	Dry thermo	Fan speed notch		ON	[Low]		OFF	Excluding the following	Stop	Room temp. < 64°F	[Low]																				
Dry thermo	Fan speed notch																															
ON	[Low]																															
OFF	Excluding the following	Stop																														
	Room temp. < 64°F	[Low]																														
3. Drain pump	Same control as COOL operation																															
4. Vane (up/down vane change)	Same control as COOL operation																															



## 7-3. FAN OPERATION

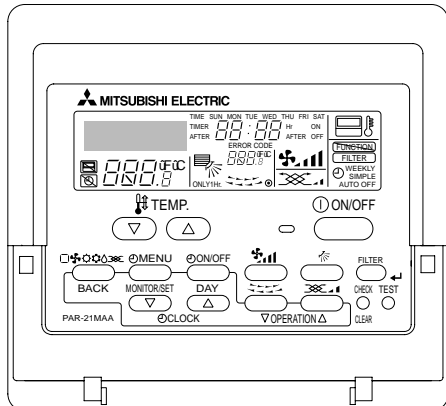


### <How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display FAN.

Control modes	Control details	Remarks				
1. Fan	<p>Set by remote controller.</p> <table><tr><th>Type</th><th>Fan speed notch</th></tr><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></table> <p>When [Auto] is set, fan speed becomes [Low].</p>	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					
2. Drain pump	<p>2-1. Drain pump control The drain pump turns ON for the specified amount of time when any of the following conditions is met:</p> <p>① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN).</p> <p>② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.</p> <p>2-2. Float switch control</p> <ul style="list-style-type: none"><li>• Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF.</li></ul> <p>In the water : Detected that the float switch is ON for 15 seconds.</p> <p>In the air : Detected that the float switch is OFF for 15 seconds.</p>					
3. Vane (up/down vane change)	Same as the control performed during the COOL operation, but with no restriction on the vane's downward blow setting	· Same control as COOL operation				



## 7-4. HEAT OPERATION

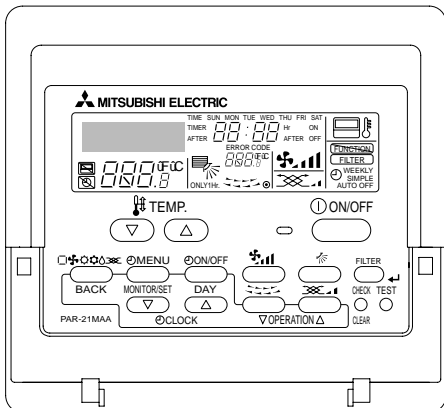

### <How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display HEAT.
- ③ Press the TEMP. button to set the desired temperature.

**NOTE:** The set temperature changes 2°F when the  $\nabla$  or  $\Delta$  button is pressed one time. Heating 63 to 83°F.

### <Display in HEAT operation>

#### [DEFROST]

The [DEFROST] symbol is only displayed during the defrost operation.

#### [STANDBY]

The [STANDBY] symbol is only displayed during the hot adjust mode.

Control modes	Control details	Remarks				
1. Thermostat function	1-1. Thermostat function (Function to prevent restarting for 3 minutes) <ul style="list-style-type: none"><li>Room temperature <math>\leq</math> desired temperature -2°F ...Thermo ON</li><li>Room temperature <math>\leq</math> desired temperature ...Thermo OFF</li></ul>					
2. Fan	<p>By the remote controller setting (switch of 4 speeds+Auto)</p> <table><tr><th>Type</th><th>Fan speed notch</th></tr><tr><td>4 speeds + Auto type</td><td>[Low], [Med2], [Med1], [High], [Auto]</td></tr></table> <p>When [Auto] is set, fan speed is changed depending on the value of: Desired temperature - Room temperature Give priority to under - mentioned controlled mode</p> <p>2-1. Hot adjust mode 2-2. Residual heat exclusion mode 2-3. Thermo OFF mode (When the compressor off by the thermostat) 2-4. Cool air prevention mode (Defrosting mode)</p>	Type	Fan speed notch	4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]	
Type	Fan speed notch					
4 speeds + Auto type	[Low], [Med2], [Med1], [High], [Auto]					
	<p>2-1. Hot adjust mode</p> <p>The fan controller becomes the hot adjuster mode for the following conditions.</p> <p>① When starting the HEAT operation ② When the thermostat function changes from OFF to ON. ③ When release the HEAT defrosting operation</p> <div></div> <p>A: Hot adjust mode starts. B: 5 minutes have passed since the condition A or the indoor liquid pipe temperature turned 95°F or more. C: 2 minutes have passed since the condition B. (Terminating the hot adjust mode)</p>	<p>*1 "STAND BY" will be displayed during the hot adjust mode.</p>				
	<p>2-2. Residual heat exclusion mode</p> <p>When the condition changes the auxiliary heater ON to OFF (thermostat or operation stop, etc), the indoor fan operates in [Low] mode for 1 minute.</p>	<p>· This control is same for the model without auxiliary heater.</p>				

To be continued on the next page.




**From the preceding page**

Control modes	Control details	Remarks
2. Fan	2-3. Thermo OFF mode When the thermostat function changes to OFF, the indoor fan operates in [Extra low].	
	2-4. Heat defrosting mode The indoor fan stops.	
3. Drain pump	3-1. Drain pump control The drain pump turns ON for the specified amount of time when any of the following conditions is met: ① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN). ② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.	
	3-2. Float switch control • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water: Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds.	• Same control as COOL operation
4. Vane control (Up/down vane change)	(1) Initial setting: OFF → HEAT...[last setting] When the last setting is [Swing] ... [Downward D] When changing the mode from exception of HEAT to HEAT operation ...[Downward D] (2) Vane position: Horizontal →Downward A →Downward B →Downward C→Downward D→Swing→Auto ↑ (3) Restriction of vane position ① The vane is horizontally fixed for the following modes. (The control by the remote controller is temporally invalidated and control by the unit.) •Thermo OFF •Hot adjust [Extra low] mode •Heat defrost mode	



## 7-5. AUTO OPERATION [AUTOMATIC COOL/HEAT CHANGE OVER OPERATION]

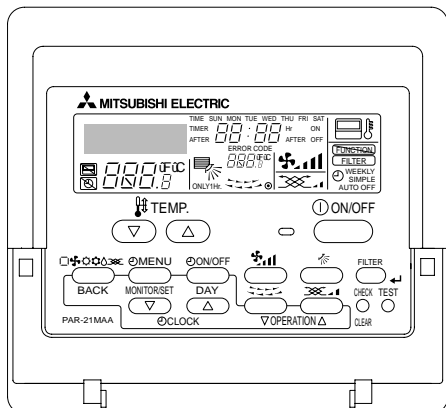

### <How to operate>

- ① Press POWER ON/OFF button.
- ② Press the operation MODE button to display AUTO.
- ③ Press the TEMP. button to set the desired temperature.

**NOTE:** The set temperature changes 2°F when the or button is pressed one time. Automatic 67 to 83°F

Control modes	Control details	Remarks
1. Initial value of operation mode	HEAT mode for room temperature < Desired temperature COOL mode for room temperature $\geq$ Desired temperature	
2. Mode change	(1) HEAT mode $\rightarrow$ COOL mode Room temperature $\geq$ Desired temperature + 3°F. or 3 min. has passed (2) COOL mode $\rightarrow$ HEAT mode Room temperature $\geq$ Desired temperature - 3°F. or 3 min. has passed	
3. COOL mode	Same control as cool operation	
4. HEAT mode	Same control as heat operation	

## 7-6. WHEN UNIT IS STOPPED

Control modes	Control details	Remarks
1. Drain pump	<b>1-1. Drain pump control</b> The drain pump turns ON for the specified amount of time when any of the following conditions is met: ① ON for 3 minutes after the operation mode is switched from COOL or DRY to another operation mode (FAN). ② ON for 6 minutes after the float switch is submerged in the water when the float switch control judges the sensor is in the water.	
	<b>1-2. Float switch control</b> • Float switch control judges whether the sensor is in the air or in the water by turning the float switch ON/OFF. In the water : Detected that the float switch is ON for 15 seconds. In the air : Detected that the float switch is OFF for 15 seconds.	• Same control as COOL operation



## 8-1. HOW TO CHECK THE PARTS

PCFY-P15NKMU-E.TH

PCFY-P24NKMU-E.TH

PCFY-P30NKMU-E.TH










PCFY-P36NKMU-E.TH

PCFY-P15NKMU-ER1.TH

PCFY-P24NKMU-ER1.TH

PCFY-P30NKMU-ER1.TH

PCFY-P36NKMU-ER1.TH

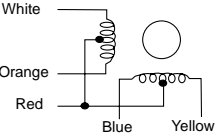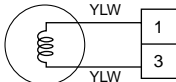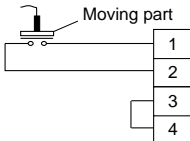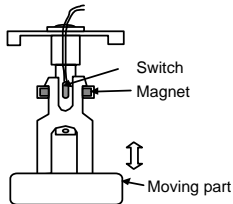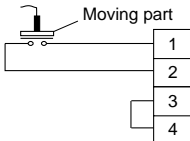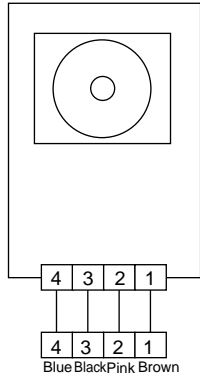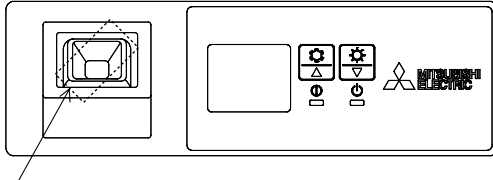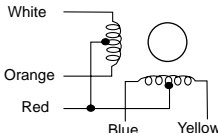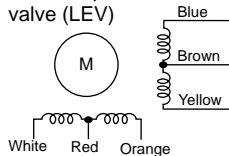Parts name	Check points																
Room temperature thermistor (TH21) Liquid pipe thermistor (TH22) Gas pipe thermistor (TH23)	Disconnect the connector then measure the resistance with a tester. (At the ambient temperature 50°F~86°F)																
	<table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>4.3kΩ~9.6kΩ</td><td>Open or short</td></tr></table>	Normal	Abnormal	4.3kΩ~9.6kΩ	Open or short	(Refer to the next page for a detail.)											
Normal	Abnormal																
4.3kΩ~9.6kΩ	Open or short																
Vane motor (MV) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 68°F~86°F)																
	<table><tr><td>Connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>Red - Yellow</td><td rowspan="4">300Ω</td><td rowspan="5">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	300Ω	Open or short	Red - Blue	Red - Orange	Red - White							
Connector	Normal	Abnormal															
Red - Yellow	300Ω	Open or short															
Red - Blue																	
Red - Orange																	
Red - White																	
Drain pump (DP) (Option) 	Measure the resistance between the terminals with a tester. (Winding temperature 68°F)																
	<table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>290Ω</td><td>Open or short</td></tr></table>	Normal	Abnormal	290Ω	Open or short												
Normal	Abnormal																
290Ω	Open or short																
Drain float switch (FS) (Option) 	Measure the resistance between the terminals with a tester.																
<div>Drain float switch (FS) (Option)</div> 	<table><tr><td>State of moving part</td><td>Normal</td><td>Abnormal</td></tr><tr><td>UP</td><td>Short</td><td>Other than short</td></tr><tr><td>DOWN</td><td>Open</td><td>Other than open</td></tr></table>	State of moving part	Normal	Abnormal	UP	Short	Other than short	DOWN	Open	Other than open							
State of moving part	Normal	Abnormal															
UP	Short	Other than short															
DOWN	Open	Other than open															
i-see sensor (Option) 	<div>① Turn on the indoor unit with the black plastic tape on the outside of i-see sensor controller board. ② i-see sensor rotates then pull out the connector of motor for i-see sensor. ③ With electricity being turned on, measure the power voltage between connectors with tester.</div> <div><p>Black plastic tape</p></div> <div>i-see sensor (At the ambient temperature of 50°F~104°F)</div> <table><tr><td>i-see sensor connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>②(-)—④(+)</td><td>DC 1.857V~ 3.132V</td><td>Other than the normal</td></tr><tr><td>①(+)—②(-)</td><td>DC 0.939V~ 1.506V</td><td>Other than the normal</td></tr></table> <p><b>NOTE</b> : Be careful of handling such a static electricity.</p>			i-see sensor connector	Normal	Abnormal	②(-)—④(+)	DC 1.857V~ 3.132V	Other than the normal	①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal					
i-see sensor connector	Normal	Abnormal															
②(-)—④(+)	DC 1.857V~ 3.132V	Other than the normal															
①(+)—②(-)	DC 0.939V~ 1.506V	Other than the normal															
Vane motor for i-see sensor (Option) 	Measure the resistance between the terminals with a tester. (At the ambient temperature of 68°F~86°F)																
	<table><tr><td>Connector</td><td>Normal</td><td>Abnormal</td></tr><tr><td>Red - Yellow</td><td rowspan="4">250Ω</td><td rowspan="5">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	250Ω	Open or short	Red - Blue	Red - Orange	Red - White							
Connector	Normal	Abnormal															
Red - Yellow	250Ω	Open or short															
Red - Blue																	
Red - Orange																	
Red - White																	
Linear expansion valve (LEV) 	Disconnect the connector then measure the resistance valve with a tester.																
	<table><tr><td colspan="4">Normal</td><td>Abnormal</td></tr><tr><td>White-Red</td><td>Yellow-Brown</td><td>Orange-Red</td><td>Blue-Brown</td><td rowspan="2">Open or short</td></tr><tr><td colspan="4">200Ω ±10%</td></tr></table>	Normal				Abnormal	White-Red	Yellow-Brown	Orange-Red	Blue-Brown	Open or short	200Ω ±10%				Refer to 8-1-2.	
Normal				Abnormal													
White-Red	Yellow-Brown	Orange-Red	Blue-Brown	Open or short													
200Ω ±10%																	



## 8-1-1. Thermistor

<Thermistor characteristic graph>

Thermistor for  
lower temperature


Room temperature thermistor (TH21)  
Liquid pipe temperature thermistor (TH22)  
Gas pipe temperature thermistor (TH23)

Thermistor  $R_0 = 15k\Omega \pm 3\%$

Fixed number of  $B = 3480 \pm 2\%$

$$R_t = 15 \exp \left\{ 3480 \left( \frac{1}{273 + (t - 32)/1.8} - \frac{1}{273} \right) \right\}$$

30°F	15.8kΩ
50°F	9.6kΩ
70°F	6.0kΩ
80°F	4.8kΩ
90°F	3.9kΩ
100°F	3.2kΩ

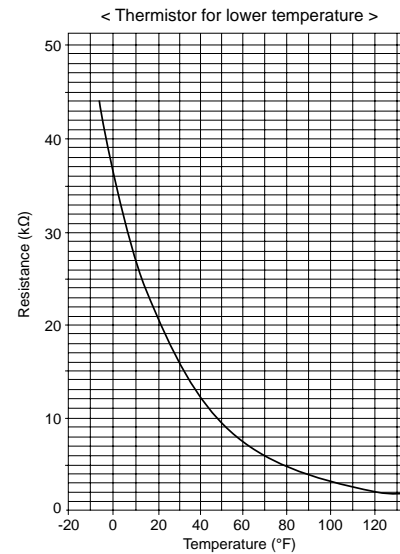


## 8-1-2. Linear expansion valve

① Operation summary of the linear expansion valve

- Linear expansion valve open/close through stepping motor after receiving the pulse signal from the indoor controller board.
- Valve position can be changed in proportion to the number of pulse signals.

<Connection between the indoor controller board and the linear expansion valve>

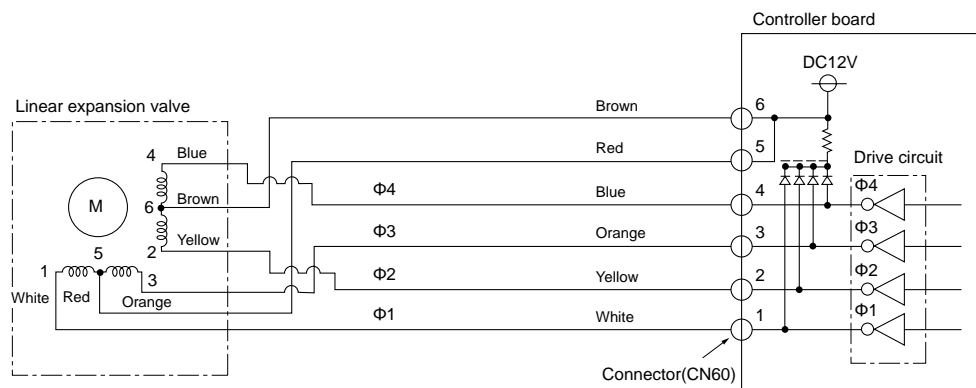



## <Output pulse signal and the valve operation>


Output (Phase)	Output			
	1	2	3	4
Φ1	ON	OFF	OFF	ON
Φ2	ON	ON	OFF	OFF
Φ3	OFF	ON	ON	OFF
Φ4	OFF	OFF	ON	ON

Closing a valve : 1 → 2 → 3 → 4 → 1  
 Opening a valve : 4 → 3 → 2 → 1 → 4  
 The output pulse shifts in above order.

### Note:

- When linear expansion valve operation stops, all output phase become OFF.
- At phase interruption or when phase does not shift in order, motor does not rotate smoothly and motor will lock and vibrate.
- When the switch is turned on, 2200 pulse closing valve signal will be sent till it goes to point ㉔ in order to define the valve position.
- When the valve moves smoothly, there is no sound or vibration occurring from the linear expansion valves, however, when the pulse number moves from ㉔ to ㉔ or when the valve is locked, more sound can be heard than in a normal situation.
- Sound can be detected by placing the ear against the screw driver handle while putting the screw driver tip to the linear expansion valve.

## ② Linear expansion valve operation

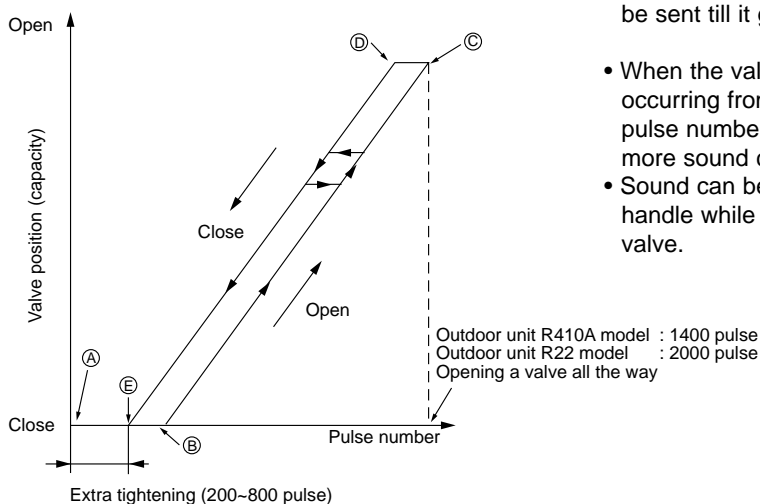

## ③ Troubleshooting

Symptom	Check points	Countermeasures
Operation circuit failure of the micro processor	Disconnect the connector on the controller board, then connect LED for checking.                      1kΩ LED <p>When power is turned on, pulse signals will be output for 10 seconds. There must be some defects in the operation circuit if the LED does not light while the signals are output or keeps lighting even after the signals stop.</p>	Exchange the indoor controller board at drive circuit failure.
Linear expansion valve mechanism is locked.	Motor will idle and make a ticking noise when the motor is operated while the linear expansion valve is locked. This ticking sound is the sign of the abnormality.	Exchange the linear expansion valve.
Short or breakage of the motor coil of the linear expansion valve	Measure the resistance between each coil (white-red, yellow-brown, orange-red, blue-brown) using a tester. It is normal if the resistance is in the range of $200\Omega \pm 10\%$ .	Exchange the linear expansion valve.
Valve does not close completely.	To check the linear expansion valve, operate the indoor unit in fan mode and at the same time operate other indoor units in cooling mode, then check the pipe temperature <liquid pipe temperature> of the indoor unit by the outdoor multi controller board operation monitor. During fan operation, linear expansion valve is closed completely and if there is any leaking, detecting temperature of the thermistor will go lower. If the detected temperature is much lower than the temperature indicated in the remote controller, it means the valve is not closed all the way.                      Thermistor (Liquid pipe) Linear expansion valve <p>It is not necessary to exchange the linear expansion valve, if the leakage is small and not affecting normal operation.</p>	If large amount of refrigerant is leaked, exchange the linear expansion valve.
Wrong connection of the connector or contact failure	Check the color of lead wire and missing terminal of the connector.	Disconnect the connector at the controller board, then check the continuity.



### 8-1-3. DC Fan motor (fan motor/indoor controller circuit board)


#### Check method of DC fan motor (fan motor/indoor controller circuit board)

① Notes

- High voltage is applied to the connector (CNMF) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNMF) for the motor with the power supply on.  
(It causes trouble of the indoor controller circuit board and fan motor.)

② Self check

Symptom : The indoor fan cannot turn around.

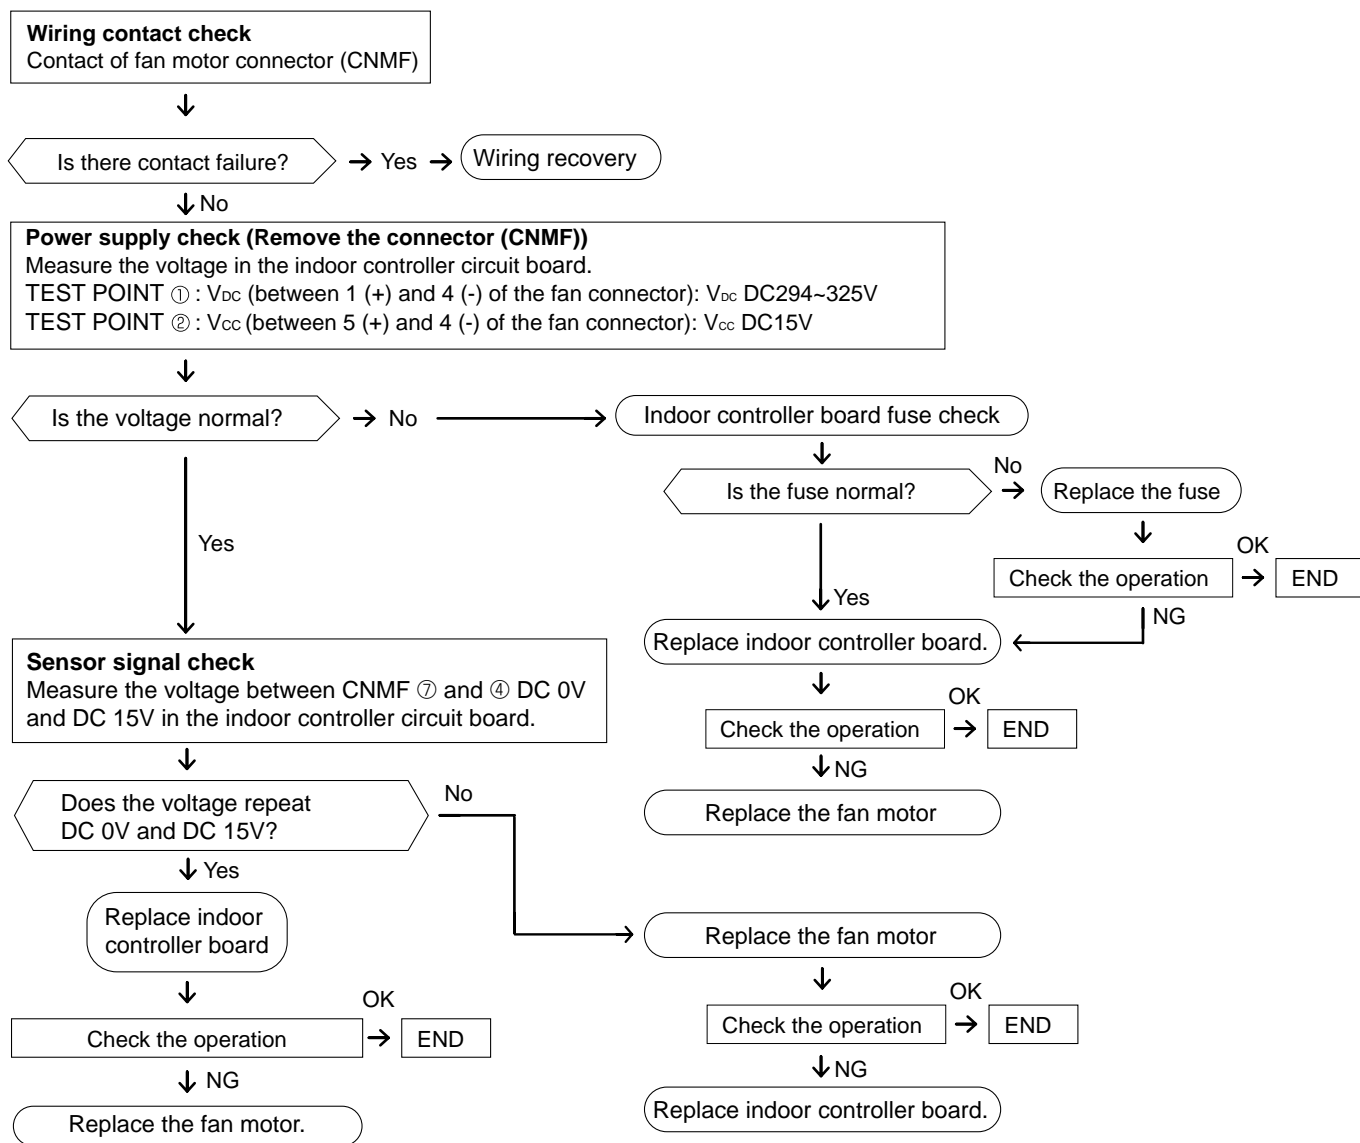



## 8-2. FUNCTION OF DIP SWITCH





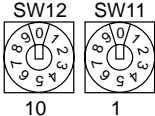
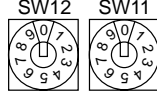


Switch	Pole	Function	Operation by switch		Effective timing	Remarks															
			ON	OFF																	
SW1 Function setting	1	Thermistor <Room temperature detection> position	Built-in remote controller	Indoor unit	Under suspension	<div>Address board</div> <div>&lt;Initial setting&gt;</div> <div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6 7 8 9 10</div></div> <div>Note :</div> <div>*1 Fan operation at heating mode</div> <div>*2 Thermo ON operation at heating mode</div> <div>*3</div> <table><tr><td>SW1-7</td><td>SW1-8</td><td></td></tr><tr><td>OFF</td><td>OFF</td><td>Extra low</td></tr><tr><td>ON</td><td>OFF</td><td>Low</td></tr><tr><td>OFF</td><td>ON</td><td>Setting airflow</td></tr><tr><td>ON</td><td>ON</td><td>Stop</td></tr></table>	SW1-7	SW1-8		OFF	OFF	Extra low	ON	OFF	Low	OFF	ON	Setting airflow	ON	ON	Stop
	SW1-7	SW1-8																			
	OFF	OFF	Extra low																		
	ON	OFF	Low																		
	OFF	ON	Setting airflow																		
	ON	ON	Stop																		
	2	Filter clogging detection	Provided	Not provided																	
	3	Filter cleaning	2,500 hr	100 hr																	
	4	Fresh air intake	Effective	Not effective																	
	5	Switching remote display	Thermo ON signal display	Indicating fan operation ON/OFF																	
6	Humidifier control	Always operated while the heat in ON*1	Operated depends on the condition*2																		
7	Airflow set in case of Heat thermo OFF at heating mode	Low *3	Extra low *3																		
8		Setting air flow *3	Depends on SW1-7																		
9	Auto restart function	Effective	Not effective																		
10	Power ON/OFF by breaker	Effective	Not effective																		
SW2 Capacity code setting	1~6	<table><tr><td>Capacity</td><td>SW 2</td><td>Capacity</td><td>SW 2</td></tr><tr><td>P15</td><td><div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div></td><td>P24</td><td><div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div></td></tr><tr><td>P30</td><td><div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div></td><td>P36</td><td><div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div></td></tr><tr><td></td><td></td><td></td><td></td></tr></table>	Capacity	SW 2	Capacity	SW 2	P15	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>	P24	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>	P30	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>	P36	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>					Before power supply ON	<div>Indoor controller board</div> <div>Set while the unit is off.</div> <div>&lt;Initial setting&gt;</div> <div>Set for each capacity.</div>	
		Capacity	SW 2	Capacity	SW 2																
		P15	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>	P24	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>																
		P30	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>	P36	<div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6</div></div>																
SW3 Function setting	1	Heat pump/Cooling only	Cooling only	Heat pump	Under suspension	<div>Indoor controller board</div> <div>Set while the unit is off.</div> <div>&lt;Initial setting&gt;</div> <div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5 6 7 8 9 10</div></div> <div>Note :</div> <div>*4 SW3-5</div> <div>*5 Please do not use SW3-9 and SW3-10. &lt;SW9 setting&gt;</div> <div>P15: ON</div> <div>P24,P30,P36: OFF</div> <div>*6 Each angle can be used only 1 hour when fan speed setting Low and Middle 1,2</div>															
	2	Louver	Available	Not available																	
	3	Vane	Available	Not available																	
	4	Vane swing function in heating (wave-flow)	Available	Not available																	
	5	Vane horizontal angle	Second setting *4	First setting *4																	
	6	Vane cooling limit angle setting	Horizontal	Setting A,B,C,D																	
	7	Changing the opening of linear expansion valve	Effective	Not effective																	
	8	4-deg up (Heating mode)	Not effective	Effective																	
	9	Superheat setting temperature *5	—	—																	
	10	Sub cool setting temperature *5	—	—																	
SW4 Model Selection	1~5	In case of replacing the indoor controller board, make sure to set the switch to the initial setting, which is shown below. <div><div>ON</div><div>OFF</div><div><div></div><div></div><div></div><div></div><div></div></div><div>1 2 3 4 5</div></div>			Before power supply ON	<div>Indoor controller board</div>															

Note : \*4 SW3-5





SW3-5	Vane setting	Initial setting	Setting	Vane position
OFF	Set up ①	●	Standard	Standard
ON	Set up ②		Less draft	Upward position than the standard

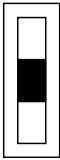



Switch	Pole	Operation by switch	Effective timing	Remarks																
SWA Ceiling height selector	1~3	<div><div>(High ceiling) 3</div><div>(Standard) 2</div><div>(Silent) 1</div><div></div><div>* Ceiling height can be changed depending on SWA setting.</div><table><thead><tr><th>SWA</th><th>①</th><th>②</th><th>③</th></tr><tr><th></th><th>Silent</th><th>Standard</th><th>High ceiling</th></tr></thead><tbody><tr><td>P15, P24</td><td>8.2ft.(2.5m)</td><td>8.9ft.(2.7m)</td><td>11.5ft.(3.5m)</td></tr><tr><td>P30, P36</td><td>8.5ft.(2.6m)</td><td>9.8ft.(3.0m)</td><td>13.8ft.(4.2m)</td></tr></tbody></table></div>	SWA	①	②	③		Silent	Standard	High ceiling	P15, P24	8.2ft.(2.5m)	8.9ft.(2.7m)	11.5ft.(3.5m)	P30, P36	8.5ft.(2.6m)	9.8ft.(3.0m)	13.8ft.(4.2m)	Under operation or suspension	<div>Address board</div> <div>&lt;Initial setting&gt;</div> <div><div>3</div><div>2</div><div>1</div><div></div></div>
SWA	①	②	③																	
	Silent	Standard	High ceiling																	
P15, P24	8.2ft.(2.5m)	8.9ft.(2.7m)	11.5ft.(3.5m)																	
P30, P36	8.5ft.(2.6m)	9.8ft.(3.0m)	13.8ft.(4.2m)																	
SWC Option selector	2	<div><div>② オプ (Option)</div><div>① 標 (Standard)</div><div></div><div>* In this model it is not necessary to change SWC to the option side.</div></div>	<div>Address board</div> <div>&lt;Initial setting&gt;</div> <div><div>② オプ</div><div>① 標</div><div></div></div>																	
SW11 1s digit address setting  SW12 10ths digit address setting	Rotary switch	<div><div>SW12 SW11</div><div></div><div>How to set address Example : If address is "3", remain SW12 (for over 10) at "0", and match SW11 (for 1 to 9) with "3".</div></div>	Before power supply ON	<div>Address board</div> <div>Address can be set while the unit is stopped.</div> <div>&lt;Initial setting&gt;</div> <div><div>SW12 SW11</div><div></div></div>																
SW14 Branch No. setting	Rotary switch	<div><div>SW14</div><div></div><div>How to set branch number SW14 (Series R2 only) Match the indoor unit's refrigerant pipe with the BC controller's end connection number Remain other than series R2 at "0".</div></div>		<div>Address board</div> <div>&lt;Initial setting&gt;</div> <div><div>SW14</div><div></div></div>																

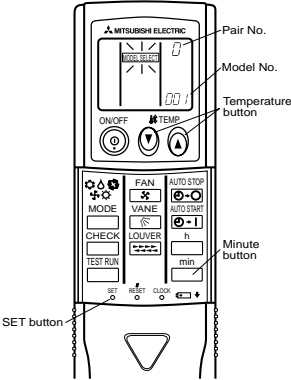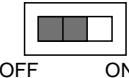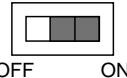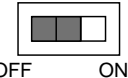

Switch	Pole	Operation by switch	Effective timing	Remarks																											
J41, J42 Wireless remote controller Pair No.	Jumper	<ul style="list-style-type: none"> <li>To operate each indoor unit by each remote controller when installed 2 indoor units or more are near, Pair No. setting is necessary.               <ol style="list-style-type: none"> <li>Pair No. setting is available with the 4 patterns (Setting patters A to D).</li> <li>Make setting for J41, J42 of indoor controller board and the Pair No. of wireless remote controller.</li> </ol> </li> <li>You may not set it when operating it by 1 remote controller.               <ol style="list-style-type: none"> <li>Setting for indoor unit Jumper wire J41, J42 on the indoor controller board are cut according to the table below.</li> <li>Wireless remote controller pair number: Setting operation                   <ol style="list-style-type: none"> <li>Press the SET button (using a pointed implement). Check that the remote controller's display has stopped before continuing. MODEL SELECT flashes, and the model No. (3 digits) appears (steadily-lit).</li> <li>Press the MINUTE button twice. The pair number appears flashing.</li> <li>Press the temperature <math>\uparrow</math> <math>\downarrow</math> buttons to select the pair number to set.</li> <li>Press the SET button (using a pointed implement). The set pair number is displayed (steadily-lit) for 3 seconds, then disappears.</li> </ol> </li> </ol> </li> </ul> <table border="1"> <thead> <tr> <th rowspan="2">Setting pattern</th><th colspan="2">Indoor controller Jumper wire</th><th rowspan="2">Pair No. of wireless remote controller *</th><th rowspan="2"></th></tr> <tr> <th>J41</th><th>J42</th></tr> </thead> <tbody> <tr> <td>A</td><td>—</td><td>—</td><td>0</td><td>Factory setting</td></tr> <tr> <td>B</td><td>Cut</td><td>—</td><td>1</td><td>—</td></tr> <tr> <td>C</td><td>—</td><td>Cut</td><td>2</td><td>—</td></tr> <tr> <td>D</td><td>Cut</td><td>Cut</td><td>3</td><td>—</td></tr> </tbody> </table> <p>* Pair No.4-9 of wireless remote controller is setting pattern D.</p>	Setting pattern	Indoor controller Jumper wire		Pair No. of wireless remote controller *		J41	J42	A	—	—	0	Factory setting	B	Cut	—	1	—	C	—	Cut	2	—	D	Cut	Cut	3	—	Under operation or suspension	<p>&lt;Initial setting&gt; Pattern A</p> 
Setting pattern	Indoor controller Jumper wire			Pair No. of wireless remote controller *																											
	J41	J42																													
A	—	—	0	Factory setting																											
B	Cut	—	1	—																											
C	—	Cut	2	—																											
D	Cut	Cut	3	—																											
SWE Test run for Drain pump (Option)	Connector	<p>Drain pump and fan are activated simultaneously after the connector SWE is set to ON and turn on the power.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center;"> <p>SWE</p>  <p>OFF    ON</p> </div> <div style="margin: 0 10px;">→</div> <div style="text-align: center;"> <p>SWE</p>  <p>OFF    ON</p> </div> </div> <p>The connector SWE is set to OFF after test run.</p>	Under operation	<p>&lt;Initial setting&gt;</p> <p>SWE</p>  <p>OFF    ON</p>																											



## 8-3. TEST POINT DIAGRAM

### 8-3-1. Indoor controller board

PCFY-P15NKMU-E.TH

PCFY-P24NKMU-E.TH

PCFY-P30NKMU-E.TH


PCFY-P36NKMU-E.TH

PCFY-P15NKMU-ER1.TH

PCFY-P24NKMU-ER1.TH

PCFY-P30NKMU-ER1.TH

PCFY-P36NKMU-ER1.TH

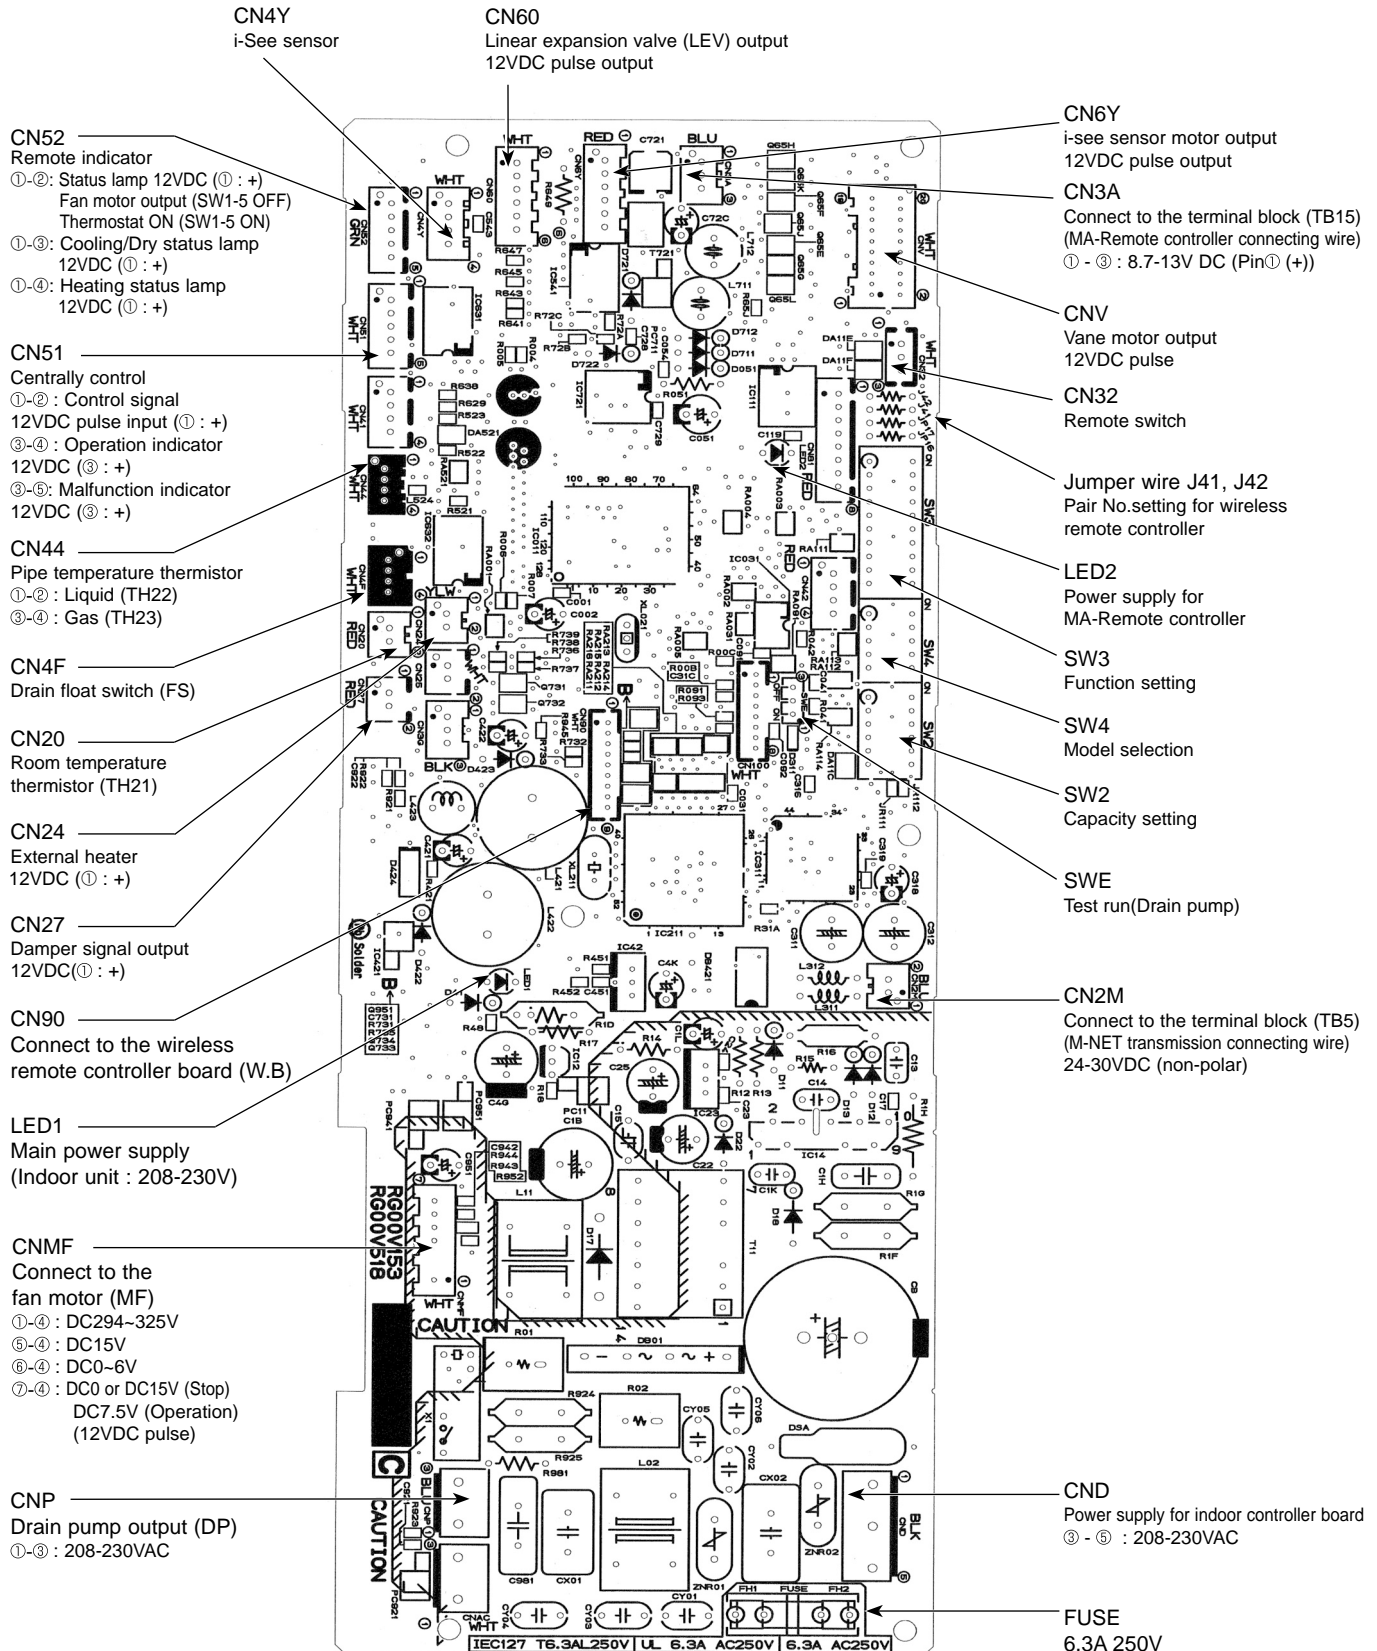



### 8-3-2. Address board

PCFY-P15NKMU-E.TH

PCFY-P24NKMU-E.TH

PCFY-P30NKMU-E.TH


PCFY-P36NKMU-E.TH

PCFY-P15NKMU-ER1.TH

PCFY-P24NKMU-ER1.TH

PCFY-P30NKMU-ER1.TH

PCFY-P36NKMU-ER1.TH

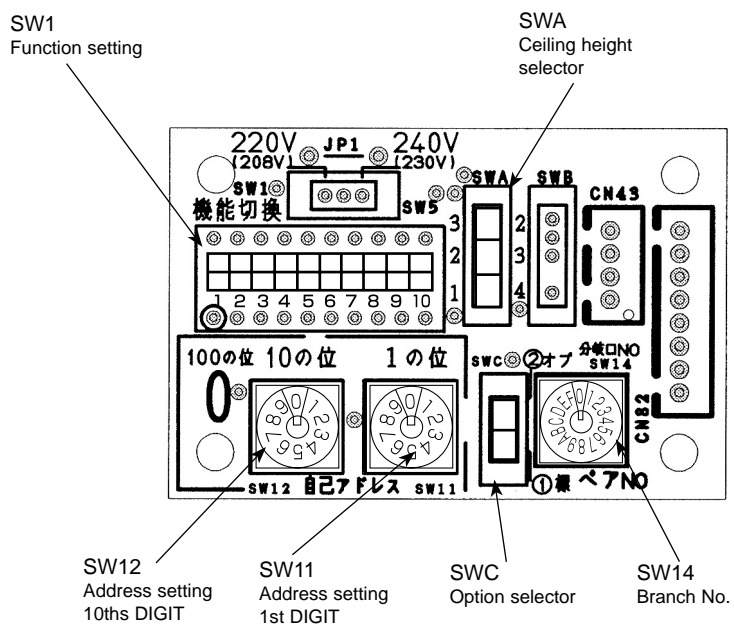



PCFY-P15NKMU-E.TH  
 PCFY-P30NKMU-E.TH  
 PCFY-P15NKMU-ER1.TH  
 PCFY-P30NKMU-ER1.TH

PCFY-P24NKUM-E.TH  
 PCFY-P36NKMU-E.TH  
 PCFY-P24NKUM-ER1.TH  
 PCFY-P36NKMU-ER1.TH

Be careful when removing heavy parts.


(Photo: PCFY-P36NKMU-E.TH)

## OPERATING PROCEDURE

### 1. Removing the air intake grille


- (1) Slide the air intake grille holding knobs (at 2 or 3 locations) to the rear to open the air intake grille. (See Figure 1)
- (2) While the air intake grille left open, push the stoppers on the rear hinges (at 2 or 3 locations) to pull out the air intake grille. (See Figure 2)

Figure 2

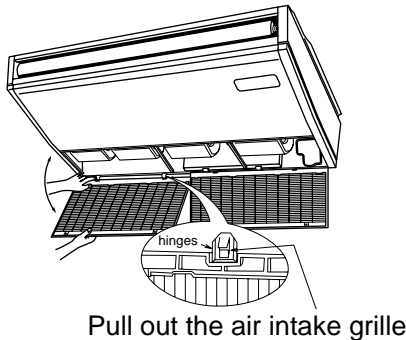

## PHOTOS & ILLUSTRATIONS

Figure 1

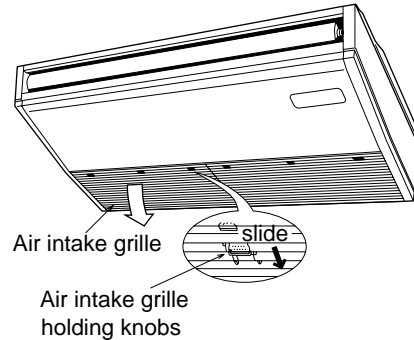

### 2. Removing the indoor controller board and the electrical box

- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the screw from the beam and remove the beam. (See Photo 1)
- (3) Remove 2 screws from the electrical cover, and remove the electrical cover.
- (4) Remove 2 screws from the electrical box and pull the electrical box downward. Temporarily secure the electrical box using 2 hooks in the back of electrical box.
- (5) Disconnect the connectors on the indoor controller board.

[Removing the electrical box]

- (6) Disconnect the wires from the terminal blocks and pull out the electrical box. (See Photo 2)

[Removing the indoor controller board]

- (6) Remove the 6 supports from the indoor controller board and remove the indoor controller board. (See Photo 3)

Photo 1

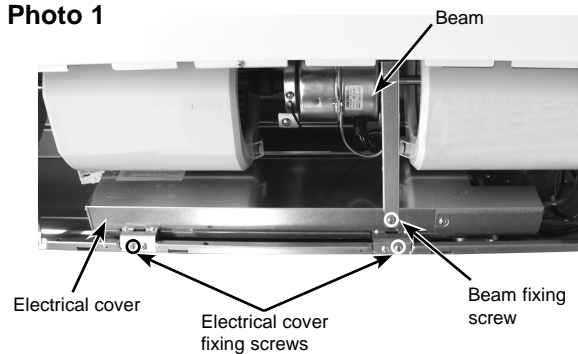


Photo 2


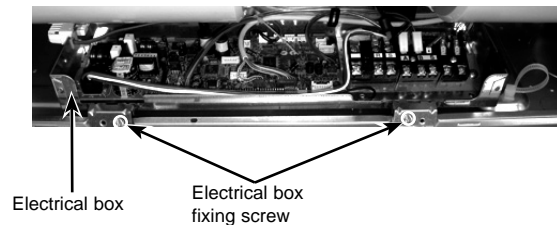


Photo 3



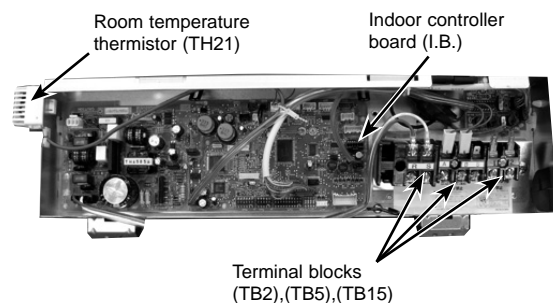

## OPERATING PROCEDURE


### 3. Removing the room temperature thermistor (TH21)

- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the screw from the beam and remove the beam. (See Photo 1)
- (3) Remove 2 screws from the electrical cover, and remove the electrical cover.
- (4) Remove 2 screws from the electrical box and pull the electrical box downward.  
Temporarily secure the electrical box using 2 hooks in the back of electrical box.
- (5) Disconnect the connector CN20 (red) from the indoor controller board.
- (6) Remove the sensor holder from the electrical box and remove the thermistor from the holder.

### 4. Removing the fan motor and right side fan


- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the screw from the beam and remove the beam. (See Photo 1)
- (3) Remove 2 screws from the electrical cover, and remove the electrical cover.
- (4) Remove 2 screws from the electrical box and pull the electrical box downward.
- (5) Temporarily secure the electrical box using 2 hooks in the back of electrical box.
- (6) Remove the lower casing while pressing the 4 catches of the casing (right side of the fan motor). (See Photo 6)
- (7) Loosen the 2 set screws (2 hexagon set screws) of connecting joint and slide the fan motor to the left. (See Photo 5)
- (8) Remove the screw for motor earth wire. (See Photo 5)
- (9) Remove the motor piece (left and right, each 1 screw). (See Photo 5)
- (10) Remove the fan motor and right side fan together.
- (11) Loosen the set screw (hexagon set screw) of fan and remove the fan from the shaft. (See Photo 7, 8)

**Photo 8**

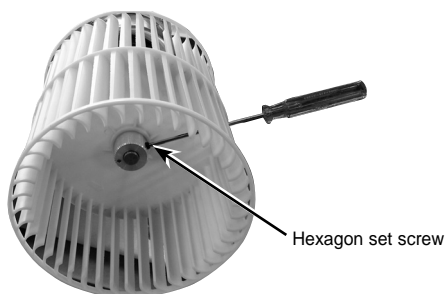


## PHOTOS & ILLUSTRATIONS


**Photo 4**

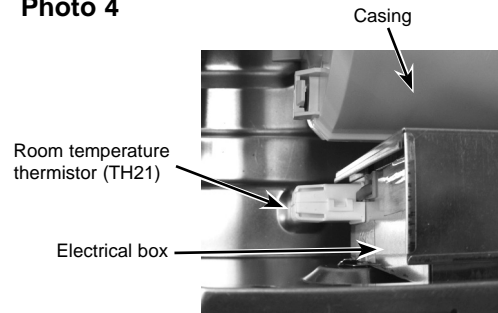


**Photo 5**

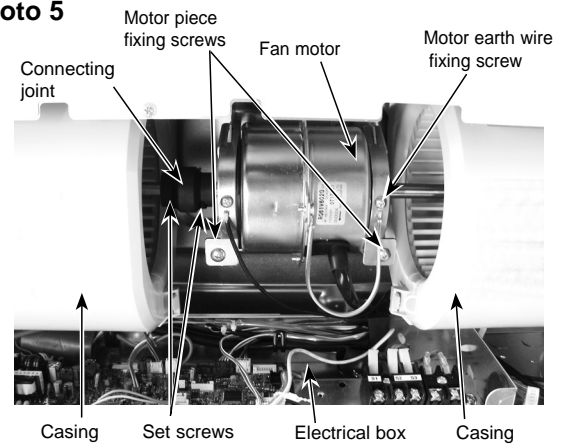

**Photo 6**

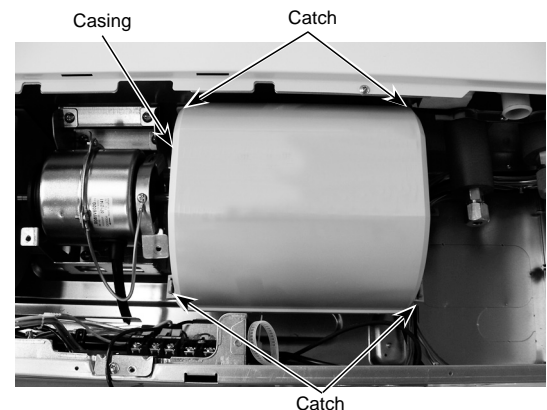

**Photo 7**

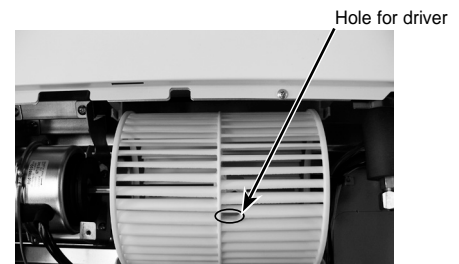




## OPERATING PROCEDURE

### 5. Removing the fan (3 connection)


- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the screw from the beam and remove the beam. (See Photo 1)
- (3) Remove 2 screws from the electrical cover, and remove the electrical cover.
- (4) Remove 2 screws from the electrical box and pull the electrical box downward.  
Temporarily secure the electrical box using 2 hooks in the back of electrical box.
- (5) Remove 2 screws from the left side beam and remove the beam. (See Photo 9)
- (6) Loosen 2 set screws (2 hexagon set screws) of connecting joint. (See Photo 5)
- (7) Remove 3 lower casings while pressing each 4 catches of the casing. (See Photo 6)
- (8) Remove the 4 screws from the bearing support. (See Photo 10)
- (9) Slide the connecting joint to the left and remove the fans and shaft together. (See Photo 11)
- (10) Remove the fan from the shaft. (See Photo 7, 8 )

**Photo 11**

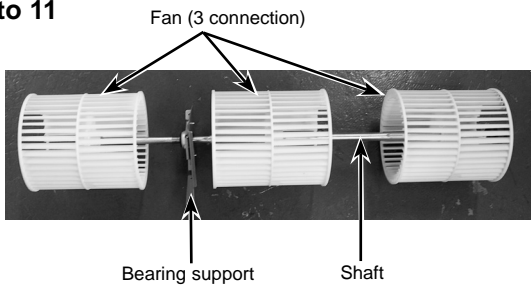


## PHOTOS & ILLUSTRATIONS

**Photo 9**

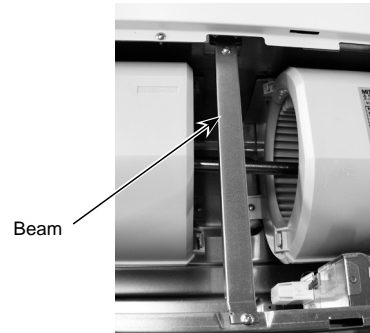


**Photo 10**

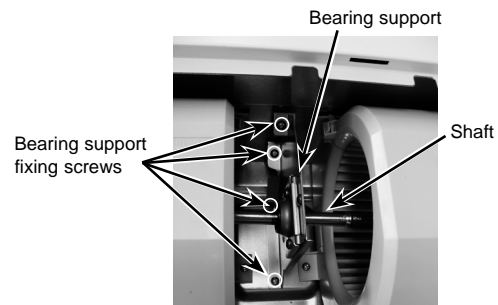


### 6. Removing the side panel






- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the screw from the side panel, and remove the side panel by sliding the panel to the front.
- (3) Unhook the side panel support hanger, and then slide the side panel forward to remove it.

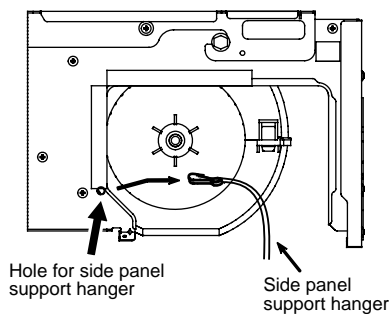

**Figure 3**




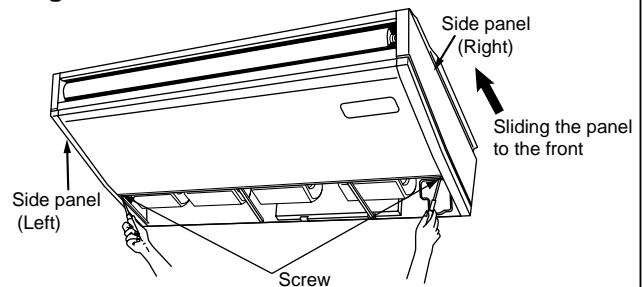


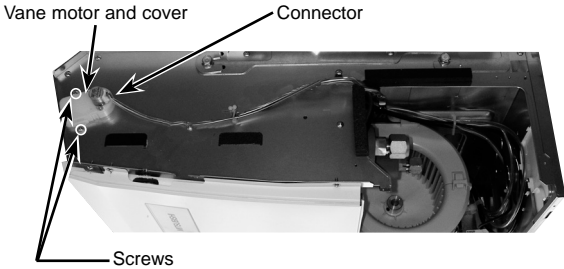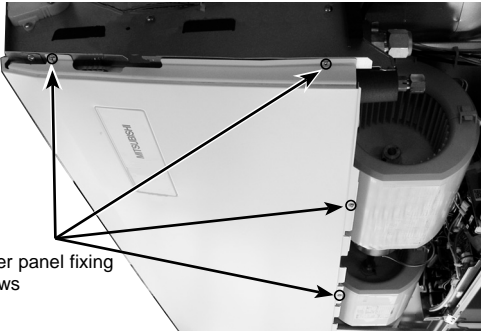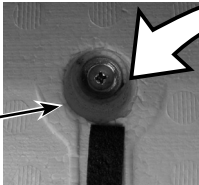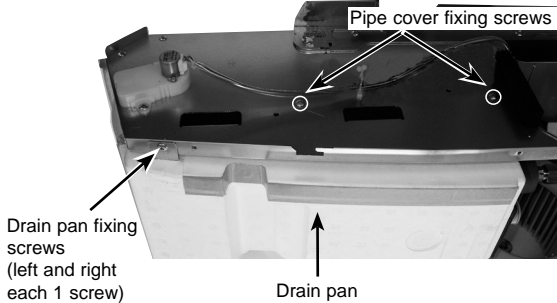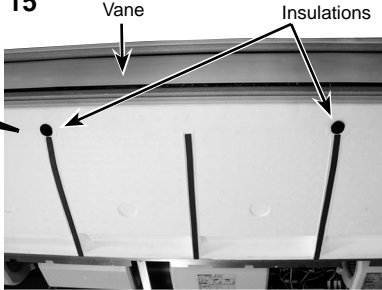

OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS
<p><b>7. Removing the vane motor</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake. (See Figure 1, 2)</li> <li>(2) Remove the right side panel. (See Figure 3)</li> <li>(3) Remove the connector of vane motor.</li> <li>(4) Remove 2 screws of vane motor cover , then remove vane motor.</li> </ol>	<p><b>Photo 12</b></p>  <p>Vane motor and cover</p> <p>Connector</p> <p>Screws</p>
<p><b>8. Removing the under panel</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille. (See Figure 1, 2)</li> <li>(2) Remove the left and right side panels. (See Figure 3)</li> <li>(3) Remove the beam. (See Photo 1)</li> <li>(4) Remove the electrical cover. (See Photo 1)</li> <li>(5) Pull the electrical box downward. (See Photo 2)</li> <li>(6) (Wireless remote controller receiver type only) Disconnect the connector CNB from the PCB for wireless remote controller and remove the clamp and strap for wires.</li> <li>(7) Remove 8 screws from the under panel.</li> <li>(8) Move the under panel forward by about 7/16 in. (10mm) and remove the under panel.</li> </ol>	<p><b>Photo 13</b></p>  <p>Under panel fixing screws</p>
<p><b>9. Removing the drain pan</b></p> <ol style="list-style-type: none"> <li>(1) Remove the air intake grille. (See Figure 1, 2)</li> <li>(2) Remove the side panel (right and left). (See Figure 3)</li> <li>(3) Remove the under panel. (See Photo 13) Remove the screws of the right and left side drain pan. (See Photo 14)</li> <li>(4) Remove 2 insulation in centre of the drain pan, and after removing 2 screws with washer, remove the drain pan. (See Photo 15, 16)</li> </ol> <p>(Note) Please be aware that there might be some drainage left in the drain pan when you remove the drain pan.</p> <p><b>Photo 16</b></p>  <p>Screw with washer (2 locations)</p>	<p><b>Photo 14</b></p>  <p>Pipe cover fixing screws</p> <p>Drain pan fixing screws (left and right each 1 screw)</p> <p>Drain pan</p> <p><b>Photo 15</b></p>  <p>Vane</p> <p>Insulations</p>



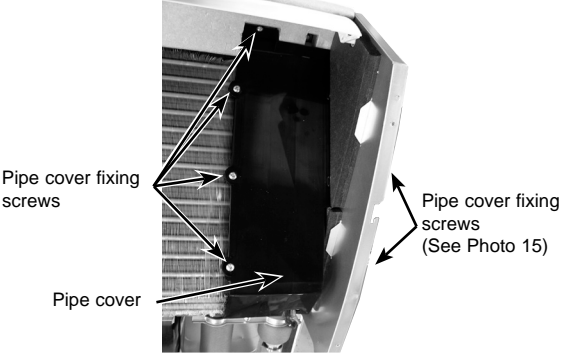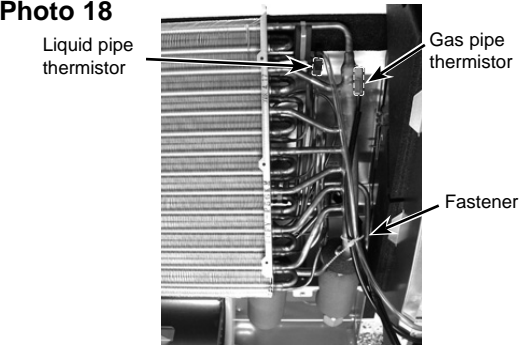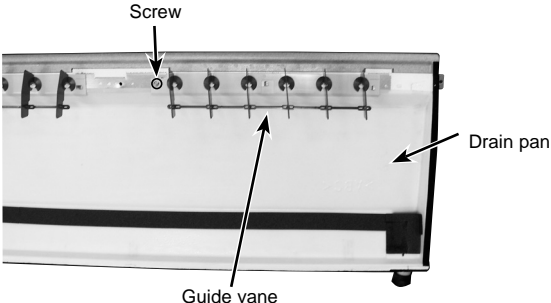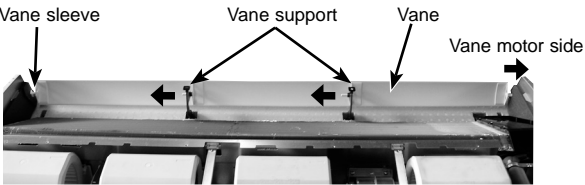

OPERATING PROCEDURE	PHOTOS & ILLUSTRATIONS
<p><b>10. Removing the pipe thermistors/Liquid (TH22) and Gas (TH23)</b></p> <p>(1) Remove the air intake grille. (See Figure 1, 2)</p> <p>(2) Remove the left and right side panels. (See Figure 3)</p> <p>(3) Remove the under panel. (See Photo 13)</p> <p>(4) Remove the drain pan. (See Photo 14, 15, 16)</p> <p>(5) Disconnect the connector CN44 (white) from the indoor controller board.</p> <p>(6) Remove 6 screws from the pipe cover and remove the pipe cover. (See Photo 14, 17)</p> <p>(7) Remove the fastener for wires and remove the thermistors (liquid and gas) from each holder. (See Photo 18)</p>	<p><b>Photo 17</b></p>  <p><b>Photo 18</b></p> 
<p><b>11. Removing the guide vane</b></p> <p>(1) Remove the intake grille. (See Figure 1, 2)</p> <p>(2) Remove the side panel (right and left). (See Figure 3)</p> <p>(3) Remove the under panel. (See Photo 13)</p> <p>(4) Remove the drain pan. (See Photo 14, 15, 16)</p> <p>(5) Remove the screw from the guide vane, then remove the guide vane.</p>	<p><b>Photo 19</b></p> 
<p><b>12. Removing the Auto vane</b></p> <p>(1) Remove the intake grille. (See Figure 1, 2)</p> <p>(2) Remove the right side panel. (See Figure 3)</p> <p>(3) Remove the vane motor and cover. (See Photo 12)</p> <p>(4) Slide the auto vane to the vane motor side.</p> <p>(5) Remove 2 axes from each vane support pushing the vane support to the vane sleeve side.</p>	<p><b>Photo 20</b></p> 



## OPERATING PROCEDURE

### 13. Removing the heat exchanger and LEV

- (1) Remove the air intake grille. (See Figure 1, 2)
- (2) Remove the beam. (See Photo 1)
- (3) Remove the electrical cover. (See Photo 1)
- (4) Pull the electrical box downward. (See Photo 2)
- (5) Disconnect the connector CN60 (white) from the indoor controller board.
- (6) Remove the left and right side panels. (See Figure 3)
- (7) Remove the under panel. (See Photo 13)
- (8) Remove the drain pan. (See Photo 14, 15, 16)
- (9) Remove the pipe cover. (See Photo 17)
- (10) Remove the pipe thermistors (TH22 and TH23) from each holder. (See Photo 18)
- (11) Remove the pipe band fixing screw and remove the pipe band. (See Photo 21)
- (12) Remove 3 screws from the heat exchanger and remove the heat exchanger with LEV.

## PHOTOS & ILLUSTRATIONS

Photo 21


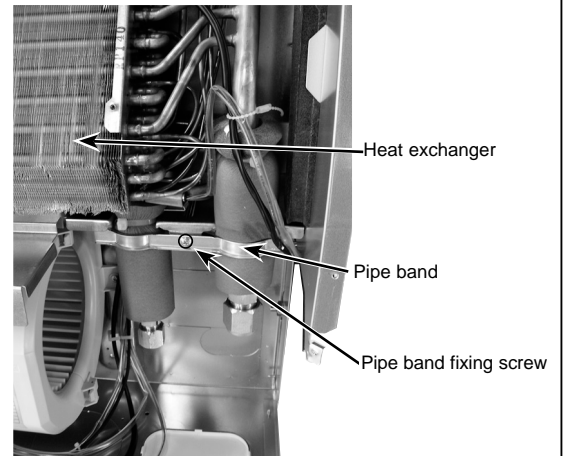


Photo 22



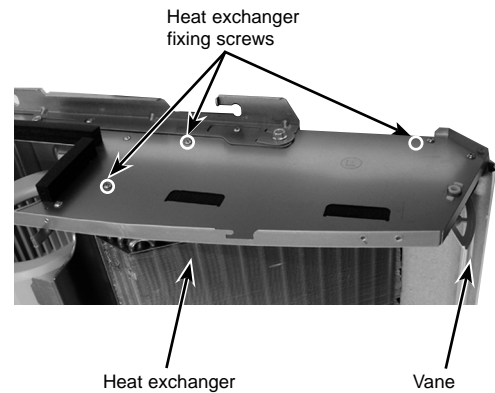

# CITY MULTI™

## MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU TOKYO 100-8310, JAPAN

---